

ISUSCom User Manual
ISUSCom 2.1.6
Document: SAT-DN-00424
2013/04/18 12:22

Prepared by: Satlantic LP
3481 North Marginal Road,
Richmond Terminal, Pier 9 Halifax, NovaScotia
B3K 5X8
Tel (902)492-4780
Fax (902)492-4781

Copyright © 2012 by Satlantic LP

Table of Contents

Overview	9
QuickStart	12
Installing	16
USB Connection	17
Dashboard	22
ISUSCom Connection Modes	28
Setup Actions	29
Settings	30
General Settings	34
Advanced Settings	38
Update Schedule	41
Calibration Update	44
Create calibration file	50
Verify calibration	53
File Manager	55
ISUS Tools	56
Sync Time	56
DAC Calibration	57
Create Report	58
Upload Firmware	59
Reboot	61
Upload Instrument Package	63
Command Terminal	65
ISUSCom Compare Calibration	66
ISUSCom Binary File Converter	67
ISUSCom Replay Data	68
Preferences	70
Application Log	72
Acquisition	78
Acquisition Views	86
Acquisition Monitor	87
Mooring Tips	94
Processing	95
ISUS Nitrate Reprocessing	99
ISUS-X Depth Processing	106

Operation Modes	107
Deployment Checklist	115
Troubleshooting	118
Common Problems	123
ISUSCom Instrument Package File	125
Index	126

ISUSCom Overview

Introduction

ISUSCom software is designed to make instrument setup and operation easy and robust. ISUSCom is a windows-based application that enables the user to:

- configure ISUS for deployment
- transfer data files at full USB speed
- set sampling schedules
- perform field calibrations
- view and log data in real-time
- post process logged data


This manual describes the functions and features for the ISUSCom software. Details about the ISUS hardware and operation can be found in the ISUS Operation Manual (Satlantic document number: SAT-DN-0425). This manual is included on the cd shipped with each instrument

ISUSCom Window layout

In order to achieve a look and feel consistent with other modern windows application the ISUSCom application was built using the Netbeans platform as its UI framework. This framework was built to give users the maximum flexibility for advanced users but still keep the application intuitive enough so that a new user can easily use the application out of the box.

The default view of the application is separated into a 3 main windows areas.

- The Dashboard Area
- The Main View Area
- The Output Area

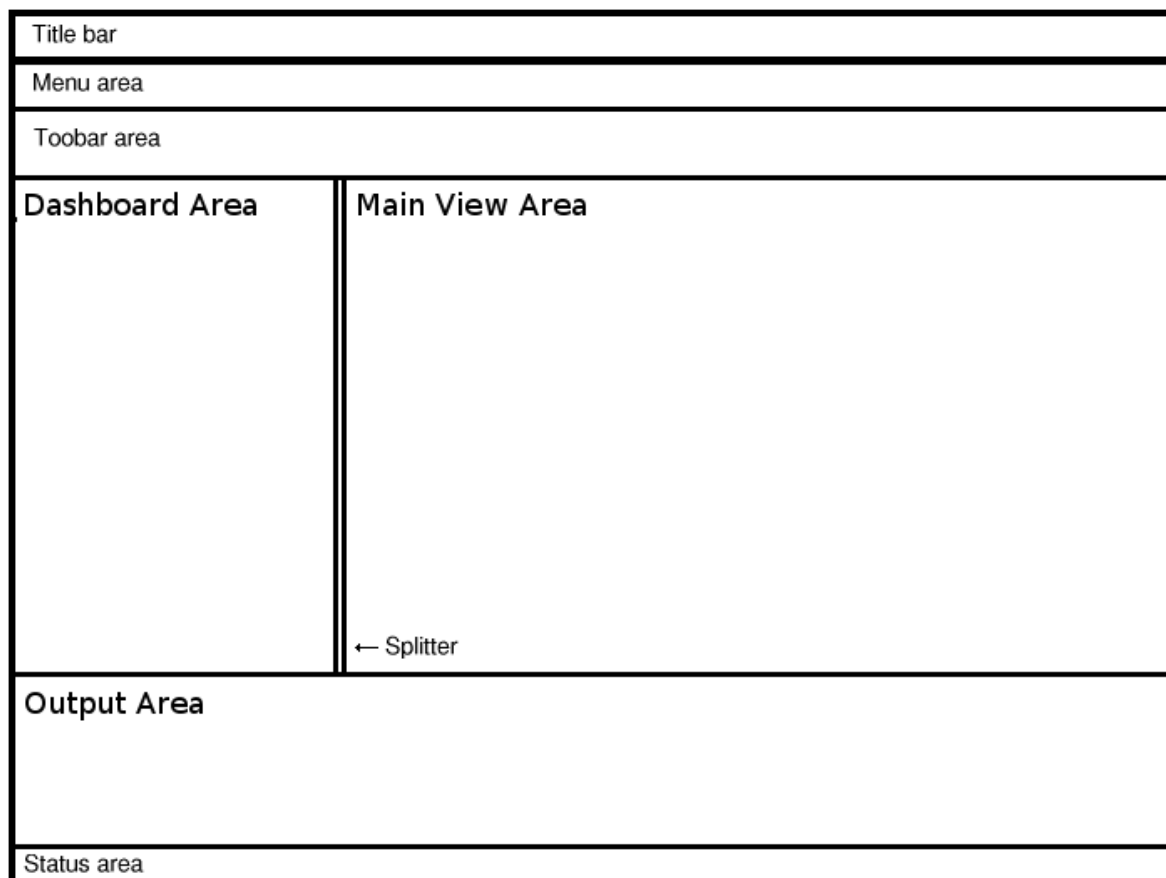

The Dashboard Area


Typically the dashboard area contains the main ISUSCom dashboard component. The purpose of the areas is to act as a starting point for the most common applications for the ISUS. All the actions of the dashboard are available through the Menu and status bars so that it can be closed to maximize viewing area for more advanced users.

The Main View Area

The main view area is located to the right of the dashboard. The main view is by default the largest area within the application. Because of its larger size it is where graphs and files are initially shown.

The Output Area

The output area is located along the bottom of the application. Components placed in this area are those usually best viewed horizontally. Typically it will contain output of log files along with smaller UI components that can be shown in a condensed space.

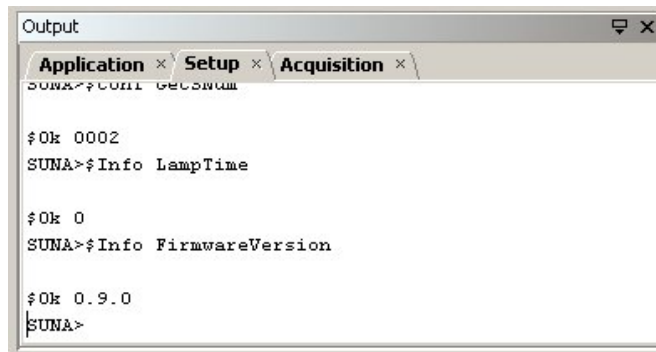

Although these are the 3 default "home" locations of ISUSCom UI components, the underlying platform is flexible enough to allow users to customize the layout of the application. Describing custom layout options of the platform are beyond the scope of this document. More detail on doing this can be found at the Netbeans Platform UI specification (http://ui.netbeans.org/docs/ui/ws/ws_spec.html#1).

Log Windows

ISUSCom comes with some logging facilities that can be used to troubleshoot problems that might exist within the application and with the ISUS instrument. While the application is running there are 3 logging consoles that reside in the Output View.

- Application

The Application tab is a log of all the actions performed by the ISUSCom windows application. It will also record all the errors and warnings that occur while attempting to communicate and run commands on the ISUS Device. The contents of this window are saved locally on disk in the install location under the "<INSTALL_DIR>\eventlogs" folder.

- Setup

The Setup tab displays the console output generated by the ISUS while it executes commands. The ISUS Setup Log is only active when the application is in Setup Mode because this is the only time when the ISUS can receive and run commands. The contents of this log are not kept, however, all commands and responses that are exchanged between ISUSCom and the ISUS can be found in the Application Log.

- Acquisition

The Acquisition tab displays the data that is being acquired by the ISUS while in Acquisition Mode. The Acquisition output is only active when the application is in Acquisition mode. Although this output is not saved, the ISUS can be configured to log the data internally or ISUSCom can be used to log the data in a user specified directory which then can be replayed in ISUSCom.

ISUSCom Files

Each ISUS instrument has unique properties which are described in configuration files. These files either reside on the instrument or they are shipped separately for use in ISUSCom.

Below is a short description of these files and how and where they are used within the application.

- Instrument Package File (XML format) - The [Instrument Package File](#) fully describes the output data format for that particular ISUS. This XML file is located on the ISUS instrument and is only used for processing ISUS data on the PC side. The output format for a particular ISUS will not change, and the Instrument Package File does not require changes either.

Note: The ISUS Instrument Package XML file can also be located on the ISUS software disk in the "Calibration files" folder.

- Calibration File - The calibration file is located on the ISUS instrument and is loaded by the firmware. It specifies the chemical species to be measured by their extinction coefficients and provides the pure water spectrum for reference. Additionally, the calibration file contains information regarding details of the calibration procedure.

The ISUS is originally shipped with a validated calibration file. Over time, the values of the reference spectrum will marginally drift, and eventually affect the instrument accuracy. The accuracy can be restored by measuring a new reference spectrum, and generating a new calibration file. ISUSCom provides an easy interface to collect the new reference spectrum data, to generate the new calibration file and to upload the new calibration file onto the instrument. Satlantic strongly advises against changing the calibration file manually (outside ISUSCom).

- Raw Data files - Raw data files contain the output data generated during the acquisition of an ISUS. These files may be logged internally on the ISUS or by using the Data Logging component of ISUSCom. The format of the data frames in these files is described by the Frame definitions in the Instrument Package File. The ISUSCom File Manager should be used to download the data files logged internally on the ISUS to the PC and also to delete data files from the ISUS to increase the available disk space for the next deployment.

QuickStart

Install and Setup

1. Run the program **ISUSCom-<version>-b<build>-x86.exe** (e.g. ISUSCom-2.1.0-b4-x86.exe) to install ISUSCom and the required USB driver. See [Installing ISUSCom](#) for details on installation requirements.
2. Wait for the **FTDI Driver Installation** dialog indicating that the USB driver installation is complete. Press **OK**.
3. Select **Start->Programs->ISUSCom->ISUSCom** to run ISUSCom.
4. Connect the ISUS USB adaptor to an available USB port on your computer.
5. After a brief pause, ISUSCom will indicate that it is in **Setup** mode, and all buttons on the dashboard will be enabled.
6. Select **Edit->ISUS Settings** to open the **Settings** dialog.
7. If the **Settings** fails to open or reports an error, then there is a problem with the USB connection. See [Troubleshooting](#) for help.
8. Review settings. Press **F1** key for help on any selected setting.
9. Press **Cancel** to continue with default settings or **OK** to apply changes.

Test ISUS Sampling

1. Select the **Run** button on the ISUSCom dashboard.
2. Connect external power to the ISUS when prompted to do so.
3. Select which ISUS **Sensor** values you wish to view in the **Start Acquisition** dialog.
4. Press the **Finish** button to start acquiring data.
ISUSCom will display graphic plots of ISUS sensor values as they are received in real time.

To test the instrument is properly calibrated*:

1. Place the ISUS in a clean nitrate-free water sample such as deionized water (i.e. DIW) to check for instrument drift.
2. If the nitrate reading is <-2 or >2 uM, then the instrument has drifted and the calibration should be updated.
3. To update the calibration and correct the drift, stop the current Acquisition and run the "Calibration Update" function.
4. Perform another Acquisition with clean deionized water to make sure the Calibration Update was successful.

* ISUS instruments are typically run for short periods (e.g. from 10 to 30 seconds) on a schedule. When operated in this way, no warm up of the lamp and spectrometer is required, the internal temperature will be relatively stable and repeatable. If however the instrument is to be used continuously, such as during a profile of the water column requiring the instrument to be on for several minutes, it is best to let the instrument warm-up for 8-10 minutes to remove the change in instrument response that can occur due to system heating.

Installing ISUSCom

System Requirements


- Operating System: Windows XP, Vista, Windows 7, Windows 8
- Processor: 2.6 GHz Intel Pentium IV or equivalent
- Memory: 2 GB
- Disk space: 1 GB of free disk space

Install process


To install the software run the self extracting executable "ISUSCom-<version>-b<build>-x86.exe" (e.g. ISUSCom-2.1.0-b5-x86.exe). For the most part the process is self explanatory. Typically the only option that a user may choose to change that needs an explanation is "USB FTDI D2XX driver" described below.

Installing the FTDI USB Driver

The last step in the installer is to install the "USB FTDI D2XX driver". ISUSCom requires this to be run at least once in order to function, on subsequent installs this step can be skipped. When the following dialog will appears press the "Extract" button to extract the FTDI CDM Driver installation files.

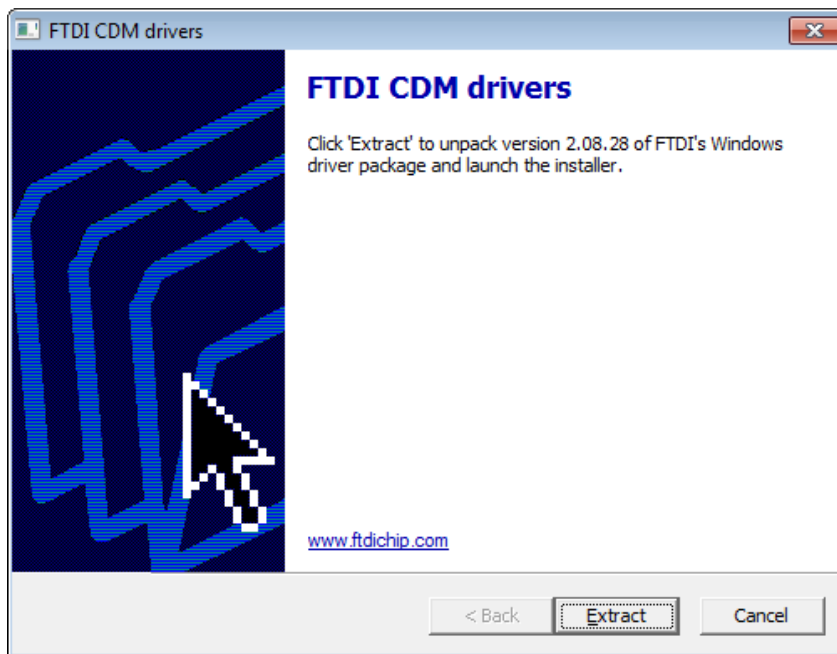

Then the following "Device Driver Installation Wizard" dialog will appear. For each step of the installation press the "Next" button and then when completed press the "Finish" button.

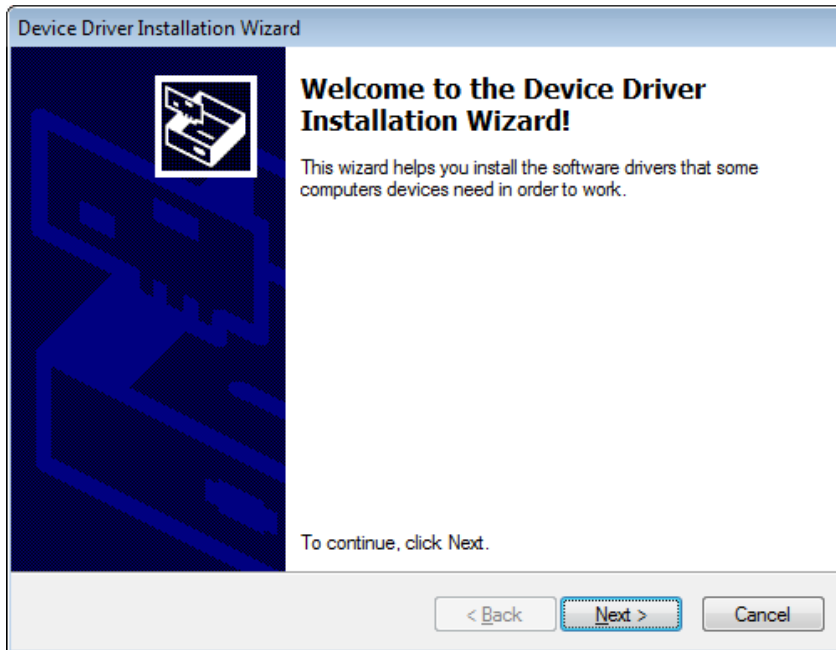

Installing the driver multiple times should not cause any problems. If for any reason a problem occurs, please use MS Windows "Device Manager" to view the status of the USB driver and correct any problems. For more information on installing and troubleshooting the USB driver see D2XX driver (<http://www.ftdichip.com/Drivers/D2XX.htm>) page. Currently, ISUSCom uses version 2.08.28 of the USB driver.

ISUS USB Connection

When the ISUS V3 USB adaptor is plugged into a USB port on the PC, the ISUS will be powered, and ISUSCom will automatically connect to the ISUS.


The power supplied by the USB port is sufficient to operate the ISUS V3 on-board computer. As a result, no auxiliary power is required to communicate with the instrument through the ISUSCom application. However, for testing the ISUS operation and acquiring data, an external power supply must be connected to the ISUS.

Detailed instructions for connecting an external power supply are outlined in the ISUS Operation Manual.

ISUSCom Dashboard

Dashboard view

The dashboard view panel contains information fields and setup actions that an ISUSCom user typically requires. It is divided into 3 sections: info fields, setup actions and acquisition control.

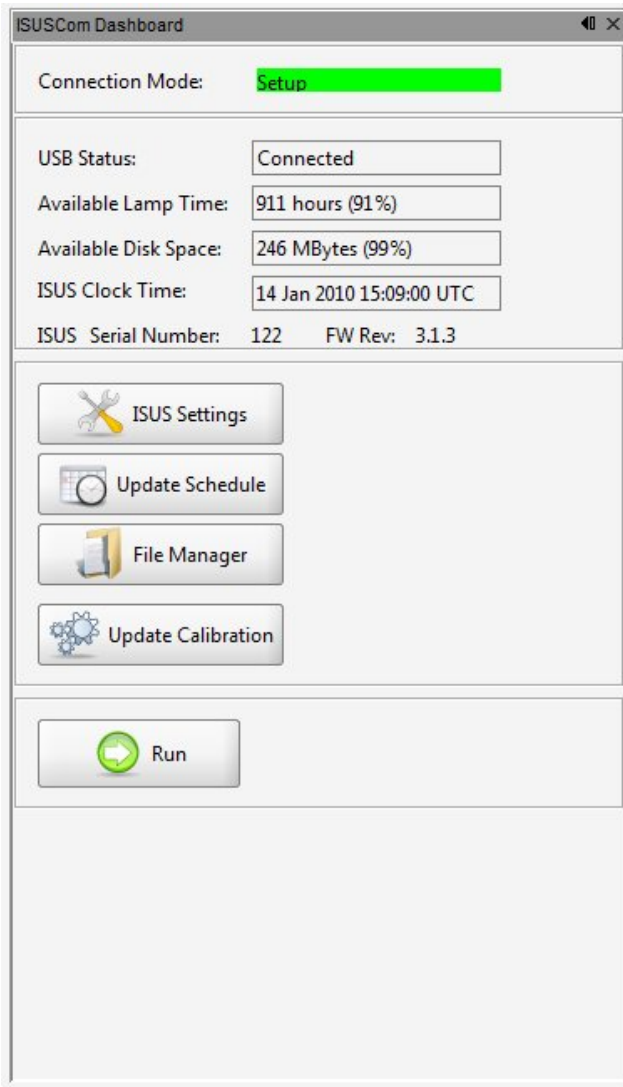

Description of Fields:

The info fields are populated when the ISUS USB adapter is attached and communication with the ISUS has been established

- Connected Mode - Describes what mode the ISUS is currently working in (ie. Disconnected, Transition, Setup or Acquisition).
- USB Status - The current status of the USB adapter (ie. Disconnected or Connected).
- Available Lamp Time - The number of hours remaining for the lamp.
- Available Disk Space - The amount of space remaining on the ISUS storage device (Note: The available space cannot reach 100%, due to system files such as firmware and configuration).
- ISUS Clock Time - The time reported by the ISUS clock. (Note: The time zone is based on the "Use UTC Time" option in the ISUSCom Preferences).
- ISUS Serial Number - The Serial number of the ISUS.
- Firmware Rev - The current version of the firmware loaded on the ISUS.

Setup Actions

- ISUS Settings - Change ISUS Current Settings.
- Update Schedule - Create and optionally upload a new Schedule File.
- Manage Files - Manage Files on the ISUS.
- Update Calibration - Update the reference spectra in the calibration file.

Acquisition Control

- Run/Stop Acquisition - Start and stop an acquisition.

ISUSCom Connection Modes

Connection mode is the current operation state the ISUS. The ISUS has two main connection modes: Setup and Acquisition. Within each of these modes the functions available to the user are different. Below is a summary of connection modes, transition states and available functions.

Setup Mode

Setup mode is the main administrative mode for the ISUSCom application in which all administrative functions are performed. When the USB cable (from the ISUS) is plugged into the USB port on the PC, the ISUS will be powered, and ISUSCom will automatically connect to the ISUS and enter Setup Mode. The length of time it takes for the ISUS to respond depends on the current state of the ISUS. For example, if the ISUS was not connected to external power before connecting the USB cable, it will take 20-30 seconds for the ISUS computer to start up and initialize. If the ISUS was connected to external power and is already on, the connection should be established within 2-3 seconds.

Acquisition Mode

Once in Setup mode it is possible to use ISUSCom to start a data acquisition. However, the power provided via USB is not sufficient, and main power has to be connected. Acquisition mode is entered by selecting the "Run" icon on the main dashboard. This function causes the connected ISUS to leave Setup mode, turn on its hardware and begin sending data. In Acquisition Mode, incoming data can be viewed graphically and logged.

Disconnected Mode

Strictly speaking, Disconnected Mode is not a mode like Setup Mode or Acquisition Mode. Disconnected mode indicates that USB is not connected and the ISUS is offline. Only those functions that can be performed offline are available in ISUSCom in Disconnected Mode. Instead of loading information from the ISUS, these operations load data from files on disk and typically result in new output files being created locally that can be uploaded later if required (e.g. updated calibration file).

Transition Mode

Transition mode is used to indicate to the user that the ISUS is currently not responsive because it is switching its internal operating mode. Typically the ISUS should not remain in this mode for more than a minute. When in transition mode, commands sent to the ISUS will be ignored and a warning message will appear.

Important Note: Disconnecting USB

When the USB cable is removed and external power is connected, the ISUS will remain in the mode that it was last in. It is **Important** to note this because if the ISUS is in Acquisition mode this could result in the unnecessary burning of limited lamp hours. If the ISUS is in Setup mode and the ISUS is deployed this could result in the the ISUS not collecting any data.

ISUS Setup Mode Actions

When the ISUS is in setup mode all of the management type functions are enabled. Below are a list of these functions.

[Edit Settings](#)

[Update Schedule](#)

[Update Calibration](#)

[File Manager](#)

[Sync ISUS Time](#)

[DAC Calibration](#)

[Summary Report](#)

[Upload Firmware](#)

[Reboot](#)

[Upload Instrument Package](#)

[Compare Calibration](#)

[Binary File Conversion](#)

[Replay ISUS Data](#)

[Preferences](#)

Edit Settings

The operation of the ISUS instrument is controlled by a number of settings parameters. Different parameter selections provide ways to prepare the ISUS for different deployment scenarios.

In setup mode, settings parameters can be changed via the settings panel. The settings panel shows the current configuration of the ISUS and any settings changed on this Dialog will be applied immediately when the Upload buttons is hit.

The settings are divided up into two areas, general settings and advanced.


[General Settings](#)

[Advanced Settings](#)

ISUSCom General Setting

General Settings

General settings are typically changed by ISUS users in the initial setup and deployment of the instrument. These settings effect the mode of operation of the instrument and not the overall stability and accuracy of the ISUS data.

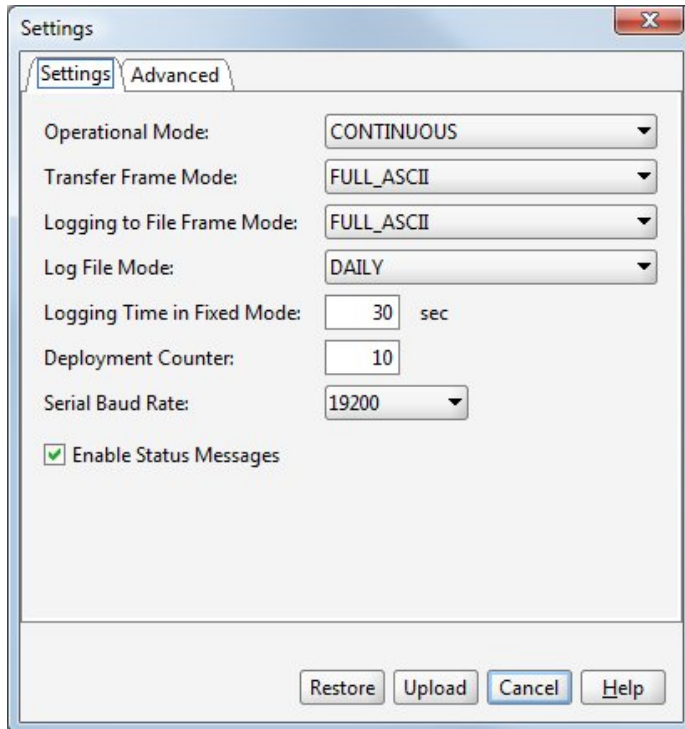

The screenshot shows a Windows-style dialog box titled "Settings" with a close button (X) in the top right corner. Inside the dialog, there are two tabs: "Settings" (which is selected) and "Advanced". The "Settings" tab contains the following configuration options:

- Operational Mode:** A dropdown menu currently set to "CONTINUOUS".
- Transfer Frame Mode:** A dropdown menu currently set to "FULL_ASCII".
- Logging to File Frame Mode:** A dropdown menu currently set to "FULL_ASCII".
- Log File Mode:** A dropdown menu currently set to "DAILY".
- Logging Time in Fixed Mode:** A text input field containing "30" followed by the unit "sec".
- Deployment Counter:** A text input field containing "10".
- Serial Baud Rate:** A dropdown menu currently set to "19200".
- Enable Status Messages:** A checkbox that is checked (indicated by a green checkmark icon).

At the bottom of the dialog, there are four buttons: "Restore", "Upload", "Cancel", and "Help". The "Cancel" button is highlighted with a blue border.

Description of Fields:

Operational Mode

The ISUS has been designed with several user-selectable operating modes: CONTINUOUS, FIXEDTIME, SCHEDULED, BENCHTOP and TRIGGERED. Future ISUS units may include additional operating modes not described here. The operating mode is retained in the ISUS's non-volatile memory. At power-up, the operating mode is checked and the necessary initialization actions are performed. If the user changes the operating mode, power will have to be removed and then reapplied (after approximately 1 minute, in order to discharge the instrument internal power protection charge). See [Operation Modes](#) for more detail.

Transfer Frame Mode

The results of each measurement are collected in individual frames. (See "Frame Output Modes" for details.) This option determines what frame type will be transmitted over the USB or Serial connection. Options are NONE, a full frame in ASCII format, a full frame in binary format, or a short (concentration) frame. The instrument default is to send full ASCII frames. For the purpose of post-processing, full frames are essential. Disadvantages of full frames are increased transfer times. It is not possible to disable both data transfer and data logging (see next option).

Logging to File Frame Mode

The results of each measurement are collected in individual frames. (See "Frame Output Modes" for details.) This option determines what frame type will be logged to internal data file. Options are NONE, a full frame in ASCII format, a full frame in binary format, or a short (concentration) frame. The instrument default is to log full ASCII frames. For the purpose of post-processing, full frames are essential. Disadvantages of logging full frames are increased write time and disk use. If no post-processing is required logging of data can be disabled. In this case, the data rate may increase slightly, due to reduced processing requirements. There is no possibility to recover data without logging to file. It is not possible to disable both data logging and data transfer (see previous option).

Log File Mode

When in SCHEDULED mode (or CONTINUOUS or FIXEDTIME mode for Firmware Rev 3.1.3 or higher), internally logged data is stored either in one file per day, or in one file per scheduled event.

Logging Time in Fixed Mode

When in FIXEDTIME mode, the instrument operates for a fixed time, and then enters the menu interface. In TRIGGERED mode, this is the maximum acquisition duration.

Deployment Counter

The deployment counter determines the next file name to be used for internal logging of data: DIVE_{nnn}.DAT, where _{nnn} is the deployment counter. If a file by that name already exists, the data will be

appended. The counter is incremented from deployment to deployment, and will be reset to 1 upon reaching a maximum value of 999. It is possible to set the counter to any value in the 1 - 999 range.

Serial Baud Rate

The data rate for the serial telemetry channel may be one of 9600, 19200 or 38400 bps. To operate at a new baud rate, it is necessary to remove power from the instrument, and restart it.


Enable Status Messages

Normally the instrument generates messages during its operation, to inform the user of what is going on. It may be desirable to reduce the amount of output generated. Error messages are not suppressed when status messages are disabled.

ISUSCom Advanced Settings

Advanced Settings

Advanced options are usually not changes. Under special circumstances or for specific reasons, changing these options may be necessary. It is recommended that such changes only be done when the effects are fully understood. **Typically, these advanced settings are modified following communication with a Satlantic representative.**

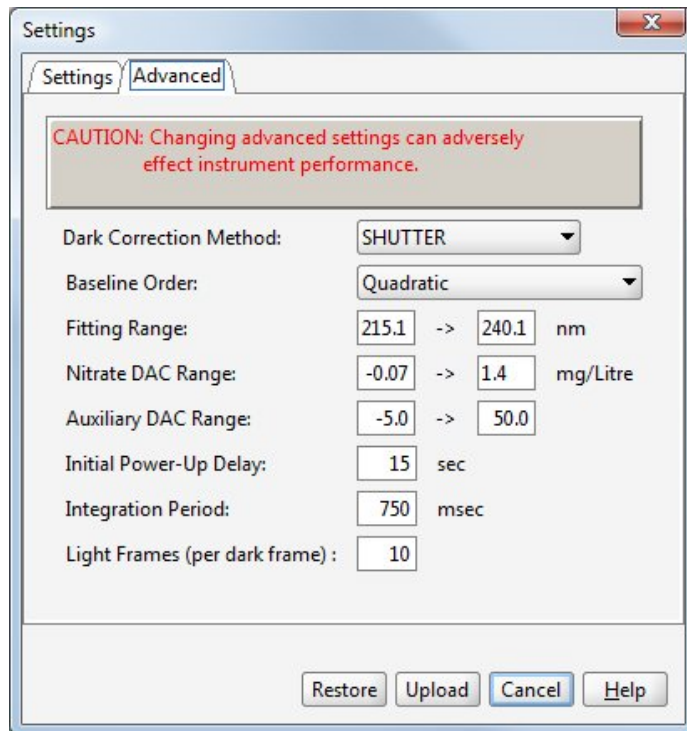

The screenshot shows the 'Settings' dialog box with the 'Advanced' tab selected. A caution message is displayed at the top: 'CAUTION: Changing advanced settings can adversely effect instrument performance.' Below this, several settings are listed with input fields and dropdown menus:

- Dark Correction Method: SHUTTER (dropdown)
- Baseline Order: Quadratic (dropdown)
- Fitting Range: 215.1 -> 240.1 nm
- Nitrate DAC Range: -0.07 -> 1.4 mg/Litre
- Auxiliary DAC Range: -5.0 -> 50.0
- Initial Power-Up Delay: 15 sec
- Integration Period: 750 msec
- Light Frames (per dark frame) : 10

At the bottom of the dialog box, there are four buttons: 'Restore', 'Upload', 'Cancel', and 'Help'.

Description of Fields:

CAUTION: These setting should only be changed after consultation with a Satlantic representative.

Dark Correction Mode

The instrument has a lamp shutter to generate dark sample readings. In case of a shutter failure in a saltwater environment only, it is possible to estimate dark values by using spectral values in the very short wavelength range instead. Saltwater has the property to completely absorb UV in the very short wavelength range. This option is provided in order to permit data acquisition during a partial instrument failure.

Baseline Order

The baseline order of the instrument is nominally set to 1 (linear), and should not be changed. Under special conditions, a baseline order of 2 (quadratic) has been shown to produce better results.

Fitting Range

The fitting range defines the wavelength range over which measurements are used for estimating the concentration(s). The instrument supports a contiguous wavelength range, which defaults to 217.5 nm to 240 nm. The best fitting range depends on the type of water the instrument is used in. The nominal fitting range is appropriate for both freshwater and seawater with moderate amounts of secondary absorbers, e.g. dissolved organic matter or particulate matter. In very clear water, the fitting range can be extended, which may reduce the noise level in the measured chemical species due to the availability of more data points for the fitting routine. If, on the other hand, chemical species with absorption in the longer wavelength range are present, these introduce a bias into the calculated concentrations. Changing the nominal fitting range is therefore only advisable if the expected water composition is known in advance.

Nitrate & Auxiliary DAC Ranges

The ISUS instrument generates analog output for the measured nitrate and auxiliary fitting data (see Instrument manual for more detailed information). The minimum and maximum values of the data range correspond to the minimum and maximum output voltages. The selected range should correspond to the expected measurement range. Selecting a too narrow range may cause loss of information; a too wide range may cause reduced resolution.

Initial Power-up Delay

The lamp ignites best after reaching a minimum temperature. The warm-up period is initially set to 5 seconds. When the lamp ages and the instrument generates log messages about problems to turn on the lamp, a warm-up period of 10 to 15 seconds may become necessary. Normally, this setting should not be changed.

Integration Period

Selecting this command allows the user to set the spectrometer integration time, in milliseconds. The normal setting is between 700 and 850 ms. Changing this value invalidates the instrument calibration.

Light Frames (per Dark Frame)

A complete acquisition cycle consists in taking a fixed number of dark samples followed by another fixed number of light samples. Normally, 1 dark sample and 10 light samples are taken. Dark values should be taken regularly, because they compensate the thermal electronic noise of the instrument. If more than one dark reading is taken, an average value is calculated.


ISUSCom Update Schedule

Update Schedule

The ISUS instrument can work in scheduled mode to periodically power up and collect data. The main reason to use a schedule is to conserve energy and extend the lifetime of the ISUS.

The details of the schedule are specified within a file that resides on the ISUS. The format of that schedule file is sensitive to formatting and should only be edited manually by someone who fully understands the format. "Appendix I" in the Operation Manual for MBARI-ISUS explains the file format.

The Update Schedule Action generates and uploads general purpose schedule files. The Update Schedule Action allows you to specify all the options required to create a schedule. It will then create a valid schedule file that can be saved and/or uploaded to the ISUS.

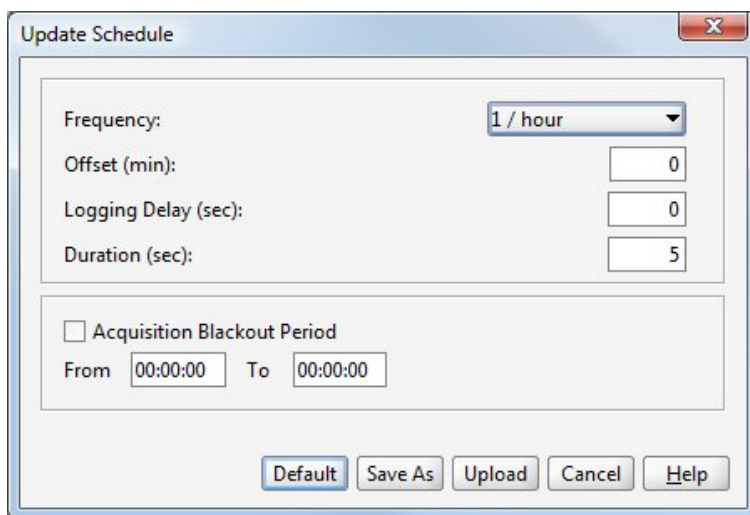

It is important to note:

The *Update Schedule* Action does not show the properties of the existing schedule when it is opened; it shows the setting of the last successfully saved schedule file. When using the *New Schedule Action* to upload a new schedule file, the existing schedule on the ISUS will be overwritten.

Description of Fields:

Frequency

The frequency controls how often the instrument will wake up and collect data

Offset (min)

The number of minutes the schedule will be offset from the full hour(s). E.g., for a schedule of two times per hour, an offset of five minutes will start the instrument at five minutes past each hour and five minutes past each half hour.

Logging Delay (sec)

Specifies how many seconds to allow for the instrument to stabilize before collecting data. This is in addition to a mandatory 25 seconds for ISUS boot up.

Duration (sec)

Specifies how many seconds each data acquisition will last.

Acquisition Blackout Period

Allows the user to specify a blackout window where no data will be collected. These times use the 24 hour clock. Within this time period the schedule will not apply. Used for e.g. acquisitions only during daylight hours.

Calibration Update Process

Reality Check

ISUS users should check instrument performance periodically and before critical deployments to ensure instrument accuracy is optimized. Satlantic recommends users measure the nitrate concentration in ultra-clean de-ionized water (DIW) to ensure the ISUS measures $0 \pm 2 \mu\text{M}$ Nitrate. Ensure that the probe tip is clean and not damaged in any way. Use KIMWIPES and isopropyl alcohol to clean the probe tip.

Place the ISUS instrument on a bench, start it (see ISUS manual for details) and let it warm-up for at least 10 minutes. The warm-up period is required to achieve relative stability of the ISUS internal temperature. Using a clean cup (or vial or test-tube), submerge the probe tip in ultra-clean de-ionized water (DIW). Acquire 30 seconds of data noting the calculated nitrate value. If it is not $0 \pm 2 \mu\text{M}$, run the update calibration procedure. It is very important to make sure there are no air bubbles on the probe lenses when measuring the DIW samples. The most common source of error when testing an ISUS instrument in bench top mode is the formation of bubbles on the probe tip. If you suspect a bubble, note the number of counts at 220 nm on the light spectrum graph. Replace the DIW sample and check whether the counts have stayed roughly the same. A bubble will cause the optical counts to drop.

Checking Accuracy Using a Water Sample of Known Concentration

The accuracy check requires a water sample with known nitrate and salinity values. Again, it is important that the probe tip is clean and there are no air bubbles on the probe lenses. Submerge the window into the prepared water standard. Using ISUSCom, monitor the nitrate concentration values. The ISUS nitrate concentrations should not deviate from the expected value by more than $\pm 2 \mu\text{M}$.

Updating Calibration of ISUS using ISUSCom

If the instrument does not read 0 +/-2 µM Nitrate for the DIW sample, we strongly recommend removing the sample, cleaning the tip and replacing the sample ensuring no bubbles cling to the lens surfaces. If the instrument still does not measure the expected value, some instrument drift may have occurred over time, and an update of the calibration file may be required. ISUSCom provides a GUI to automate the steps necessary to update the calibration reference spectrum. This process effectively re-zeros the instrument. To create an ISUS calibration file, two basic steps are required:


- [Create updated calibration file](#)
- [Verify new calibration file](#)

Calibration Update

Note: Calibration Update function can only be used if the instrument is set to "Full Binary" or "Full ASCII" modes, smaller frame formats do not contain enough information for this process.


Place the ISUS in Reference Sample

Start the Update Calibration function in ISUSCom and follow the prompts to submerge the probe in a sample of ultra-clean DIW.

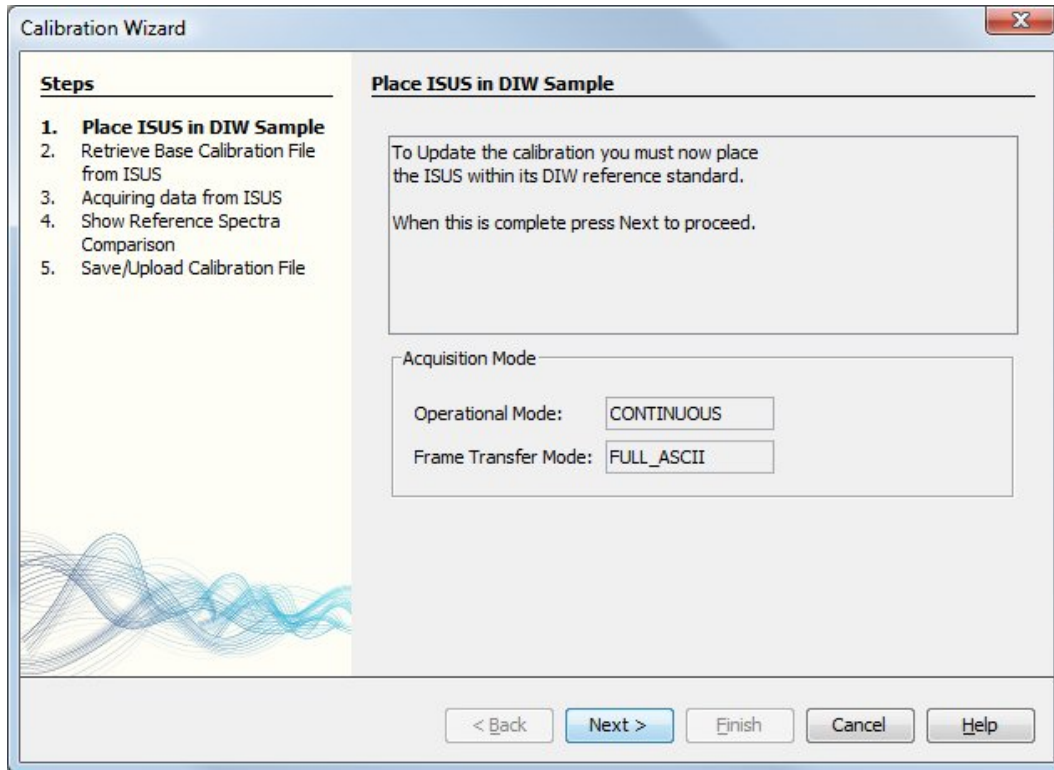


Retrieve Base Calibration File from ISUS

The second step in this process is to retrieve the base calibration file from the ISUS. The base calibration file is the calibration file that is currently being used on the ISUS. (The one that has drifted and has to be re-calibrated.) ISUSCom retrieves this calibration file automatically.

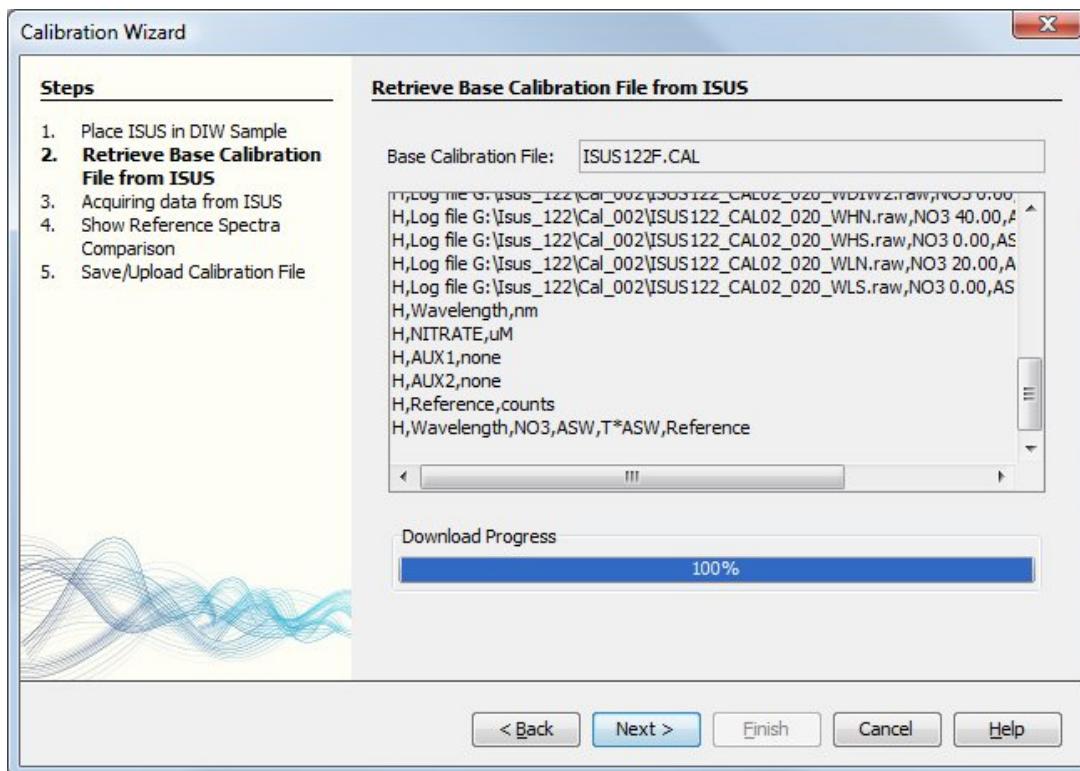


Acquiring Data

The next step is to acquire data from the reference sample. From this data, an updated averaged reference spectrum will be calculated. ISUSCom will start to collect data from the instrument, "Next" will be enabled when it has enough data to proceed.

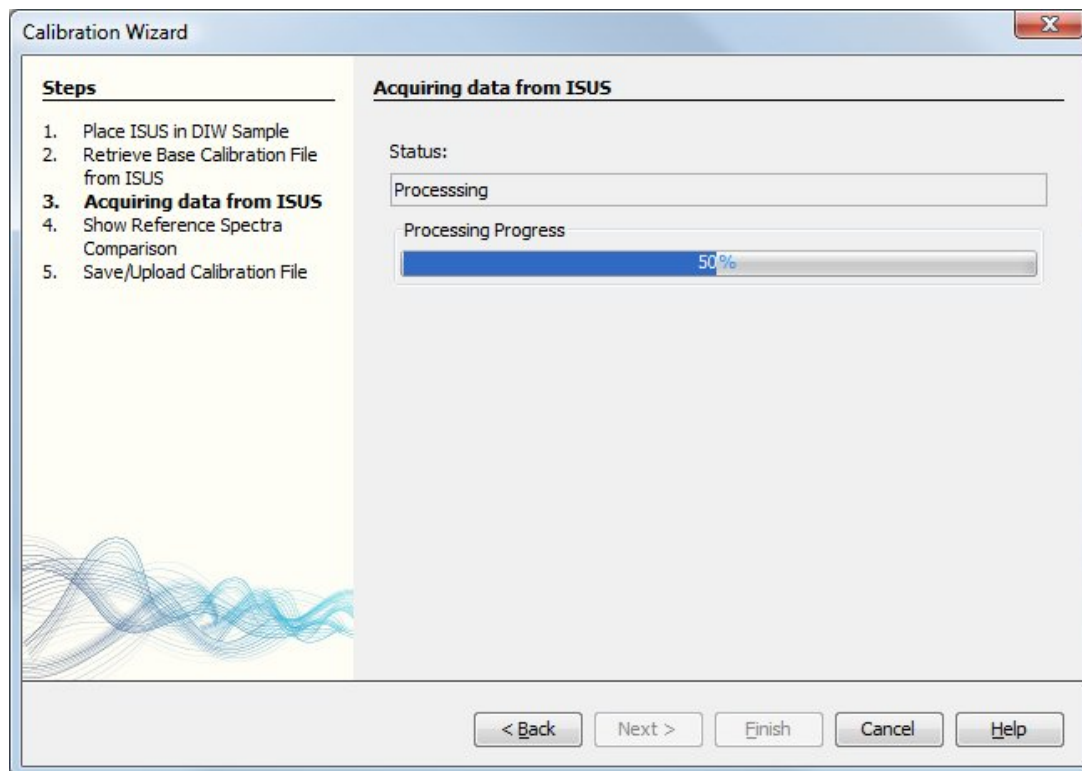


Show Reference Spectra Comparison

Before uploading and/or saving the new calibration file, ISUSCom offers the option to view a graph comparing the base reference spectrum to the new reference spectrum. The changes should be gradual over the instruments wavelength range, and are typically within 10% above 200 nm. The critical wavelength range is from 217 nm to 240 nm.

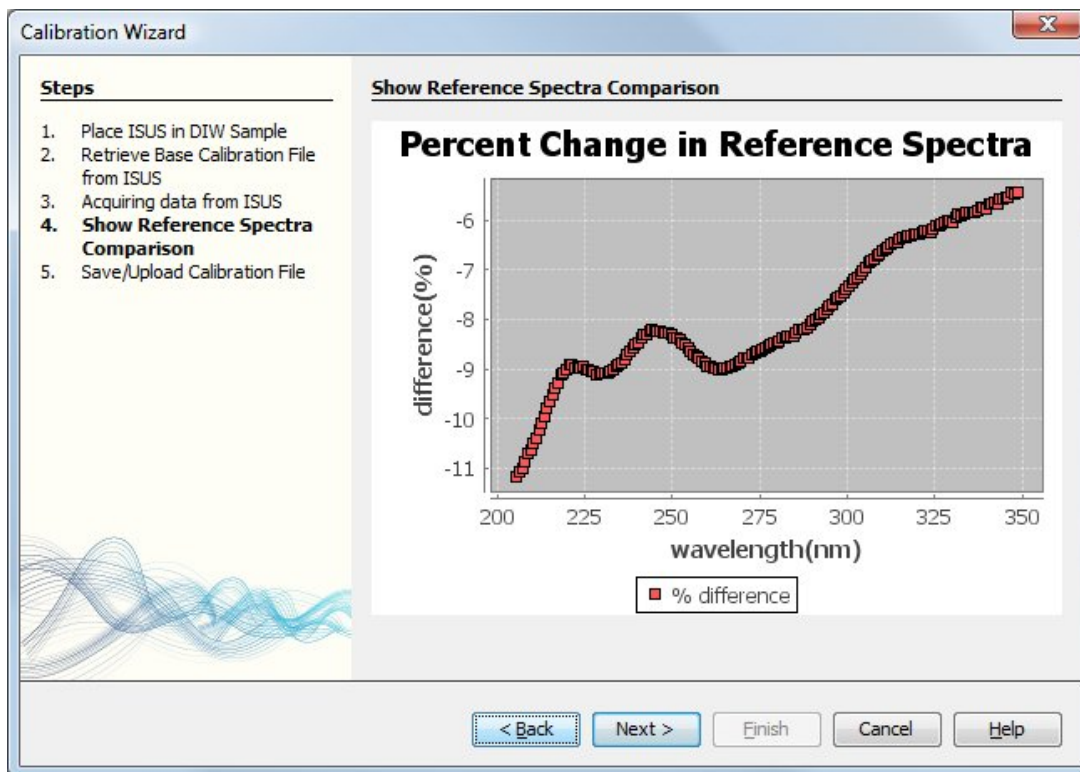

Deploying new Calibration File

The final optional step is to upload the new calibration file to the ISUS instrument flash disk. The file can also be saved locally for data post-processing or upload at a later time. ISUSCom has the ability to store 26 different revisions of calibration file on the instrument. When uploading, the user has the choice to either re-use the current revision or create a new one on the ISUS.

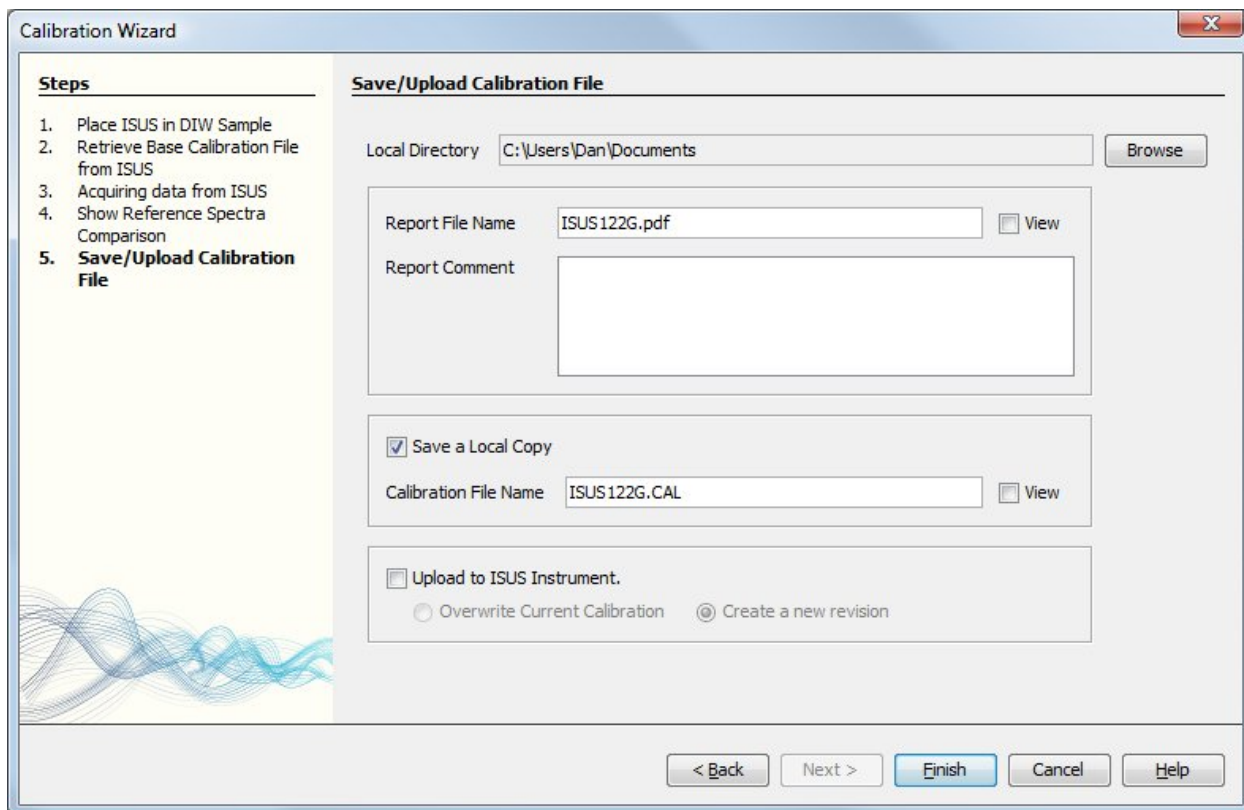

The screenshot shows the 'Calibration Wizard' dialog box, specifically the 'Save/Upload Calibration File' step. On the left, a 'Steps' list shows five steps, with the fifth step, 'Save/Upload Calibration File', highlighted in yellow. The main area of the dialog is divided into sections for file saving and uploading. The 'Local Directory' is set to 'C:\Users\Dan\Documents'. The 'Report File Name' is 'ISUS122G.pdf', and the 'Report Comment' field is empty. There is a 'View' button next to the report file name. Below this, the 'Save a Local Copy' checkbox is checked, and the 'Calibration File Name' is 'ISUS122G.CAL', also with a 'View' button. The 'Upload to ISUS Instrument' checkbox is unchecked. Under this, there are two radio buttons: 'Overwrite Current Calibration' (which is selected) and 'Create a new revision'. At the bottom of the dialog are five buttons: '< Back', 'Next >', 'Finish' (highlighted in blue), 'Cancel', and 'Help'.

When a new calibration file is created and uploaded, it is recommended that users do a reality check with a water sample of known salinity and nitrate concentration. This water sample can be prepared in a laboratory or one could use in situ measurements. It is recommended to use a water sample with the highest expected nitrate concentration (e.g. for measurements in ocean one could use a sample with nitrate concentrations around 30 μM).

Verification of Calibration File

Checking Reference Spectrum against a DIW Sample

The procedure for verifying the new calibration file essentially repeats the steps taken to acquire the reference spectrum. Ensure that the probe tip is clean and not damaged in any way. Use KIMWIPES and isopropyl alcohol to clean the probe tip. Start the ISUS and let it warm-up for about 15 minutes, if it has not been warmed up already. Then submerge the probe tip in a sample of ultra-clean DIW and monitor the nitrate concentration values using ISUSCom. If the nitrate values deviate from 0 by more than +/- 2 μM , create a new calibration file as described in the section "Create Updated Calibration File". Upload the new calibration file onto the ISUS and repeat the current step.

Checking Accuracy Using a Seawater Sample of Known Concentration


The accuracy check requires a seawater solution with known nitrate and salinity values. Again, it is important to have a clean and dry probe tip. After approximately 10 minutes of warm-up of the ISUS, submerge the probe tip into the prepared seawater standard. Using ISUSCom, monitor the nitrate concentration values. The ISUS nitrate concentrations should not deviate from the expected value by more than $\pm 2 \mu\text{M}$.

ISUSCom File Manager

File Manager


The ISUS Instrument stores the data it collects in files on its local drive. In addition to these data files the ISUS can store up to 26 different revisions of its calibration file, internal log files, its current schedule and the firmware files it needs to operate.

The ISUSCom File Manager gives an easy way to manage the parts of the ISUS file system that need to be actively managed. Within the manager there are 4 tabs, each tab representing one file type. Within each tab only the actions that are valid for that type will be enabled.

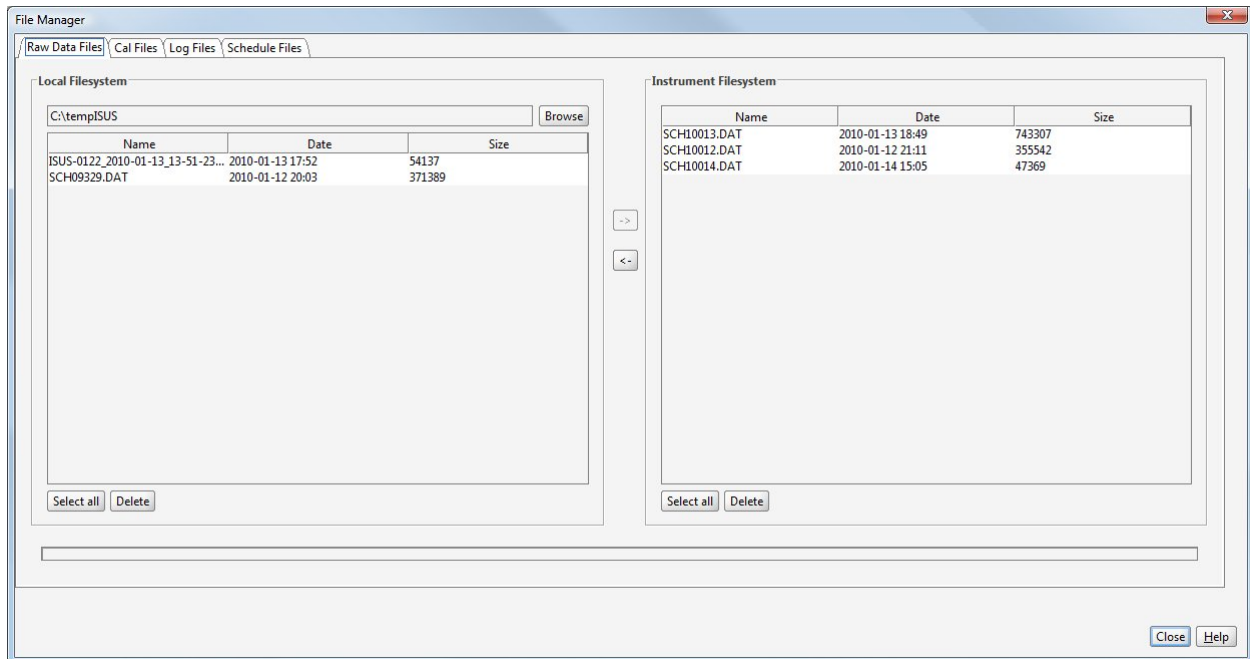

ISUSCom Sync ISUS Time

This command synchronizes the time on the ISUS to the time on the computer. When selecting "Sync ISUS Time" from the Tools Menu, a dialog will appear showing both the ISUS clock time and the computer's clock time. The time zone used for both time values is based on the "Use UTC Time" option in the ISUSCom Preferences. To synchronize the ISUS clock to the time on the computer, press the "Sync Time" button and the computer's current time is sent to the ISUS. The ISUSCom dashboard is then updated to display the new ISUS clock time.

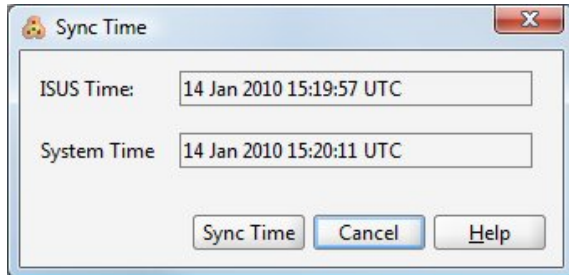


DAC Calibration

The DAC Calibration function is used to in the procedure for interfacing the ISUS to a Sea-Bird CTD profiler. By selecting the Low, High and Stop buttons commands are sent to the ISUS that send voltages to configure an attached CTD. These commands are only available when external power is connected.

Detailed instructions for this procedure are outlined in an Appendix of the ISUS Operation Manual.

Summary Report

Before a deployment or when it is important to record the complete state of the ISUS instrument, it is recommended to create a Summary Report. To do this, enter setup mode and select Summary Report under the Tools Menu. This action will show the Summary Report Dialog.

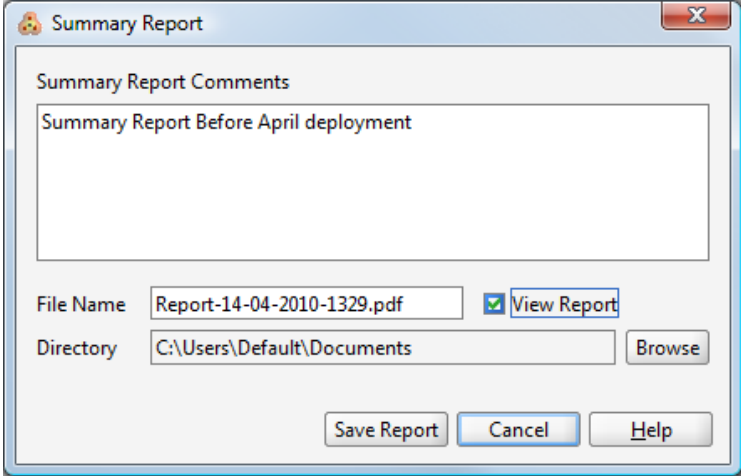

The image shows a Windows-style dialog box titled "Summary Report". It contains a text area for "Summary Report Comments" with the text "Summary Report Before April deployment". Below this are fields for "File Name" (containing "Report-14-04-2010-1329.pdf") and "Directory" (containing "C:\Users\Default\Documents"). There is a "View Report" checkbox which is checked, and a "Browse" button next to the directory field. At the bottom are three buttons: "Save Report", "Cancel", and "Help".

Enter a valid save location on disk and a comment that describes information about why the current summary report is being created.

ISUSCom Upload Firmware

Uploading new firmware


Satlantic may occasionally release updates to the ISUS firmware. ISUSCom provides a GUI to validate and install a new firmware version.

Caution: The ISUSCom software performs as many checks as possible before attempting an upgrade, but there is always some risk involved in upgrading. Because of this Satlantic advises users to be cautious when performing an upgrade. A firmware upgrade amounts to replacing the existing firmware by a new firmware. If the replacement procedure is interrupted, the instrument is left without a working firmware: The old firmware has been removed, but the new one is not installed. In this scenario, the ISUS is without a firmware, and can no longer operate. The instrument may have to be sent back to Satlantic to reload a new firmware manually. Because of this risk, we ask users to only upgrade to a new firmware version when a bug fix or new feature is required.

Procedure

In order to perform the upgrade you require

- The new firmware file from Satlantic.
- The verification code generated by Satlantic that corresponds to that firmware file

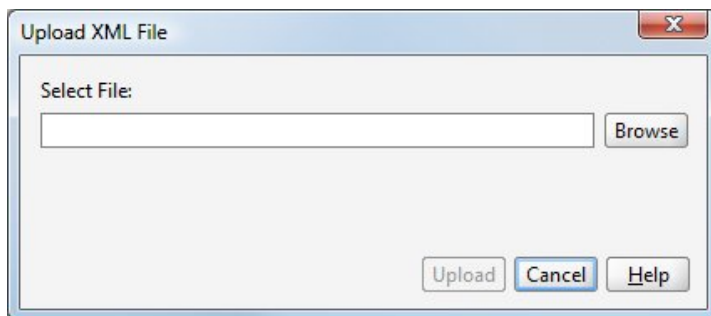

From the Tools Menu, select the Upload Firmware action to bring up the Upload Firmware action dialog. Provide both the location of the new firmware file and its verification code, then hit the upload button. When the new firmware is uploaded the ISUS uses the verification code to determine if the new firmware is valid. The entire upload procedure should take about one minute to perform. When the firmware upload is successful, a dialog is displayed to allow an immediate reboot of the ISUS. In case the uploaded firmware file is invalid (e.g. mismatch of the verification code) the upgrade procedure is terminated.

ISUSCom Reboot

The reboot command will terminate the current execution of the ISUS firmware. A new execution will commence, using the latest settings parameters. A reboot is necessary when changing the operation mode of the instrument.

When the reboot action is selected, the user will be prompted with a confirmation dialog. Once confirmed, the ISUS will be sent the reboot command. ISUSCom can not communicate with the ISUS until the reboot has completed. Once the reboot time has expired ISUSCom resumes communication with the ISUS and commands the ISUS to enter its setup mode.

ISUSCom Upload Instrument File

Instrument Package File

Each ISUS that is shipped provides an XML file that contains the frame format for the ISUS. As with all new Satlantic instrumentation this file follows the Satlantic XML Instrument File Format. This standard defines how Satlantic frames are composed and interpreted. A full explanation of this standard is beyond the scope of this document but is full explained with the SAT-DN-00157_Instrument_File_Format document.

The elements of this XML file are based upon the particular frames contents of the ISUS. These contents are fully described within the "Operation Manual for the ISUS Instrument. Most users will probably never have to edit this XML instrument file. In cases where it is necessary we ask that this should be done in conjunction with a Satlantic representative.


Upload Instrument XML File

Each ISUS is shipped with an XML file that describes the frame and sensor definitions that are associated with a particular instrument. Without this file, ISUSCom will fail to display ISUS data. This function is mainly used by Satlantic personnel to upload this file to the instrument before it leaves Satlantic.

Command Terminal

To issue commands directly to the ISUS:


1. Ensure that the ISUS is connected and in *Setup* mode.
2. Open *Command Window*
3. Select desired command from the drop-down list, **or**
4. Press TAB key to iterate through commands, **or**
5. Type a command directly (with assistive command completion)
6. Press *Submit* button to send the command to the ISUS.

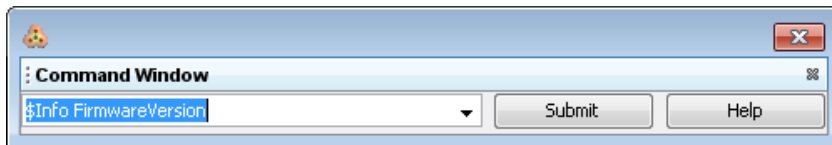

CAUTION: Do not issue any command without fully understanding its effect. Uninformed use of the command window can render the ISUS inoperable.


ISUSCom Compare Calibration

This tool allows comparison for two ISUS calibration files. Calibration files contains wavelength information, extinction coefficients for nitrate and bromide and a reference spectrum. This function compares the reference spectra from two different calibration files. This function is useful for gauging instrument drift that may have occurred between calibration updates. It is automatically preformed as part of the Update Calibration procedure.

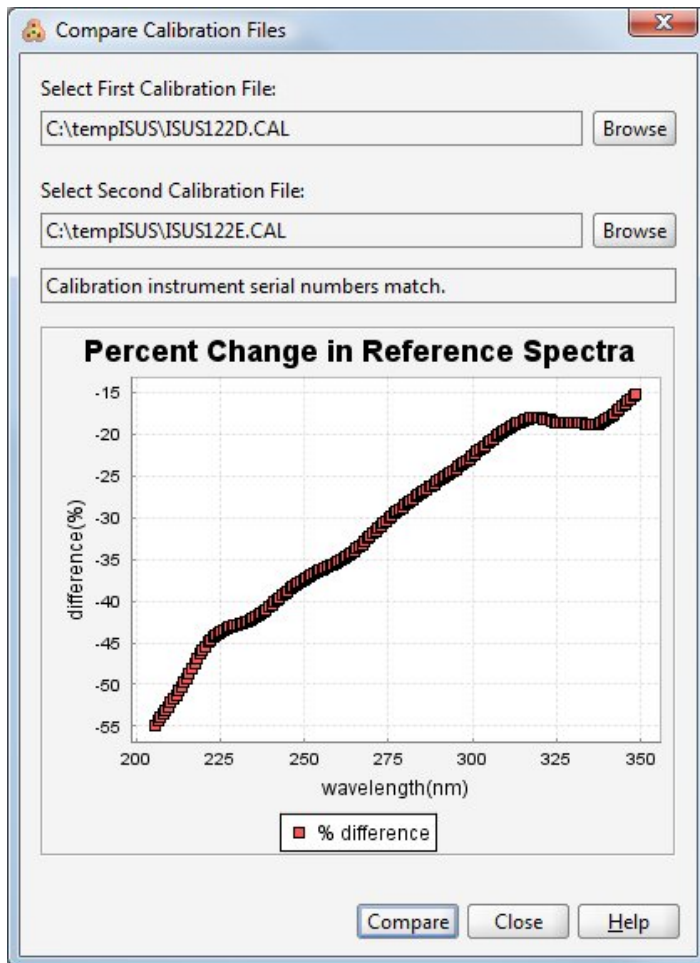

Convert Data Files

This tool allows conversion of FULL_BINARY files to ASCII.

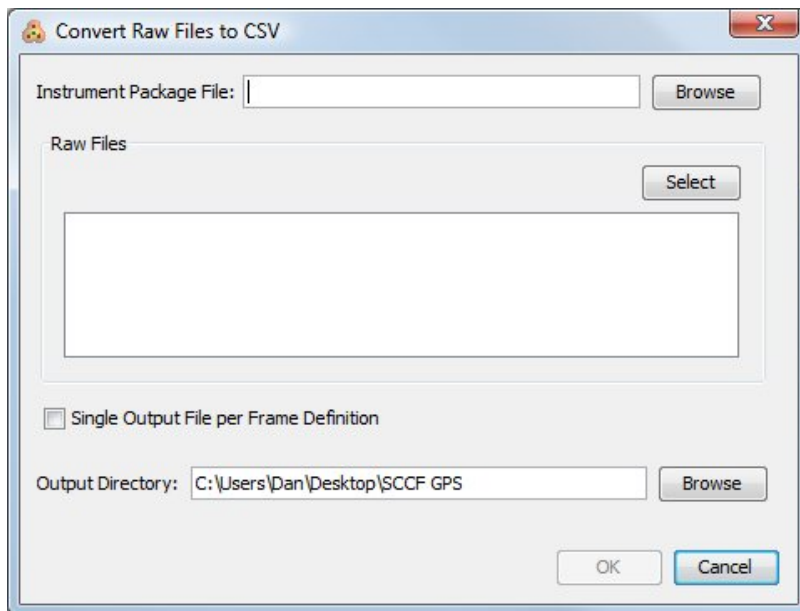


Procedure for displaying ear data

1. Select **View->Convert Data File** from the ISUSCom menu bar.
2. Select the **Instrument Package File***, **Output Directory**, **Raw Data File(s)** in the **Convert Raw Files to CSV** dialog.
3. Press the **Ok** button to start converting logged data.

* To perform this ISUSCom operation the ISUS Instrument Package XML File is required. This ISUS configuration file is provided on the ISUS software disk in the "**Calibration files**" folder.

View Logged Data

The view raw data function allows users to view the contents of raw data files in the ISUSCom user interface, this is especially important for FULL_BINARY data that cannot be easily viewed.

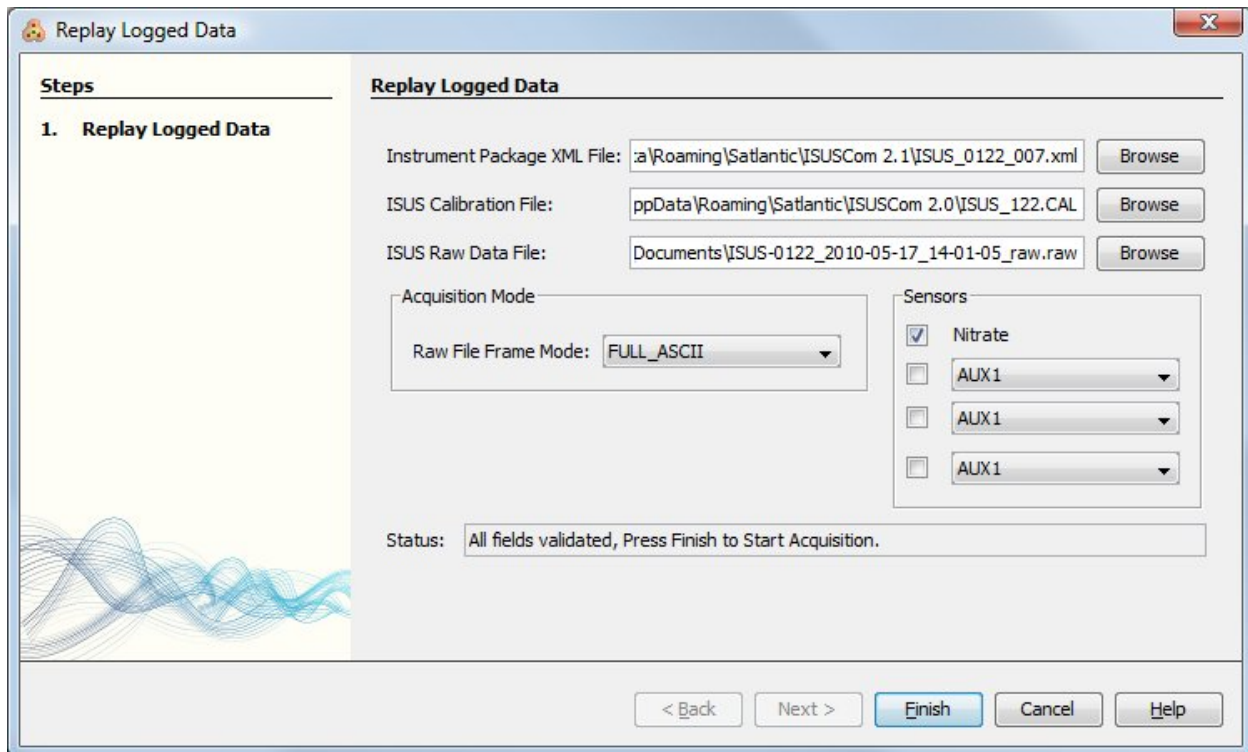


Procedure for displaying ear data

1. Select **View->Replay Logged Data** from the ISUSCom menu bar.
2. Select the **Instrument Package File***, **ISUS Calibration File**, **Raw Data File** in the **Replay Logged Data** dialog.
3. Select the **Raw File Frame Mode** of the logged data file and which **Sensor** values you wish to view in the **Replay Logged Data** dialog.
4. Press the **Finish** button to start replaying logged data.
ISUSCom will display graphic plots of ISUS sensor readings recorded in the selected raw data file.
5. Press the **Stop** button on the ISUSCom dashboard to stop replaying the raw data file.

* To perform this ISUSCom operation the ISUS Instrument Package XML File is required. This ISUS configuration file is provided on the ISUS software disk in the "**Calibration files**" folder.

ISUSCom Preferences

ISUSCom preferences are used to hold ISUSCom specific settings that are locally stored.

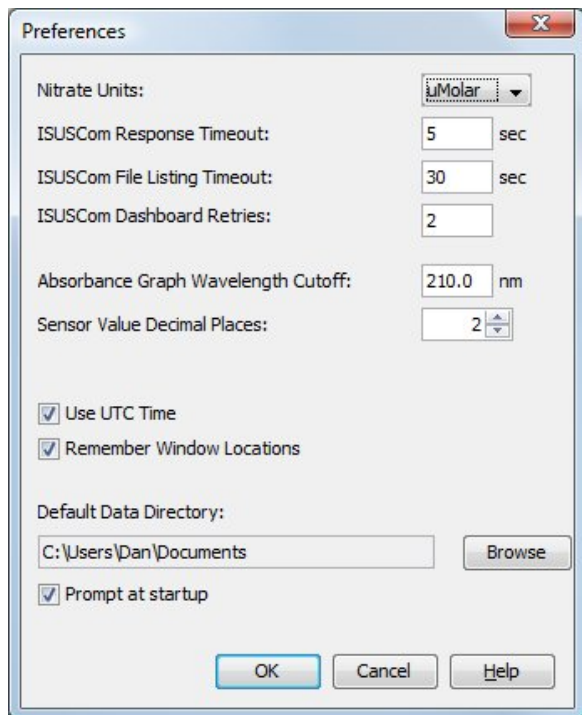

The image shows the 'Preferences' dialog box for ISUSCom. It has a title bar with a close button (X). The dialog contains several settings:

- Nitrate Units:** A dropdown menu set to 'uMolar'.
- ISUSCom Response Timeout:** A text box with '5' and a 'sec' label.
- ISUSCom File Listing Timeout:** A text box with '30' and a 'sec' label.
- ISUSCom Dashboard Retries:** A text box with '2'.
- Absorbance Graph Wavelength Cutoff:** A text box with '210.0' and a 'nm' label.
- Sensor Value Decimal Places:** A spin box set to '2'.
- Use UTC Time:** A checked checkbox.
- Remember Window Locations:** A checked checkbox.
- Default Data Directory:** A text box containing 'C:\Users\Dan\Documents' and a 'Browse' button.
- Prompt at startup:** A checked checkbox.

At the bottom are three buttons: 'OK', 'Cancel', and 'Help'.

Description of Fields:

Nitrate Units

Internally the ISUS always uses uMolar for Nitrate units. ISUSCom can be configured to convert and display these values to mg/L within its interface.

ISUSCom Response Timeout

The amount of time that ISUSCom will wait for a response from a ISUS. Used for all ISUS commands except file listing requests..

ISUSCom File Listing Timeout

The amount of time that ISUSCom will wait for a response from a file list ISUS command. These commands typically take longer to run on the ISUS so this setting was added specifically for these commands.

ISUSCom Dashboard Retries

Number of times ISUSCom will send a command to populate the dashboard before giving up.

Sensor Value Decimal Places

The number of decimal places to show for all sensor values displayed on the UI.

Use UTC Time

Used to toggle between UTC or the computer's Time Zone for all time values displayed on the UI.

Remember Windows Locations

Remember windows locations from one ISUSCom session to another.

Default Data Directory


Directory where data will be logged to by default.

Prompt at startup

Prompt the user each time to configure the default data directory, especially useful if there are multiple ISUS's being used on one computer.

ISUSCom Application Log

This tool allows for configuration of the log files ISUSCom outputs. It can be set for very brief or verbose logging depending on what the needs of the user are. The log file generated by ISUSCom are invaluable for diagnosing problems and will most likely be requested by Satlantic support.

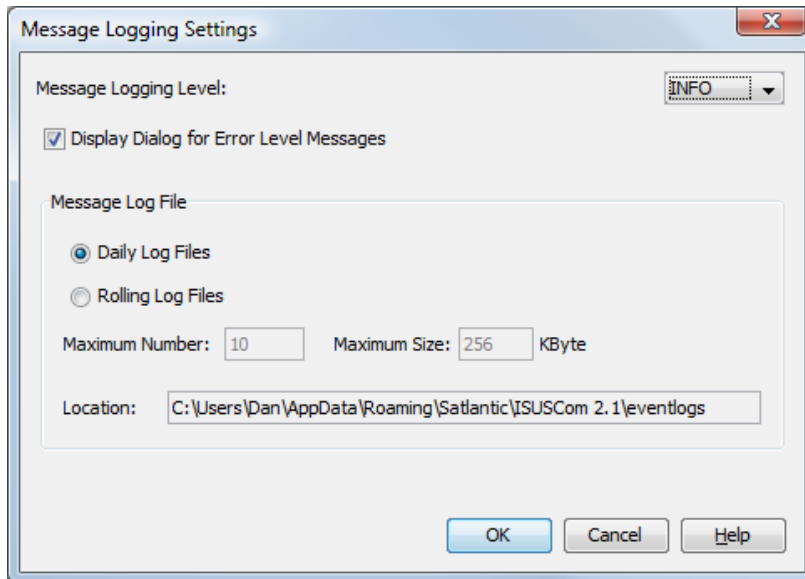

Description of Fields:

Message Log Level

The dropdown box allows users to select the sensitivity of the ISUSCom Application logs. The following log levels can be selected. All log levels are cumulative, (i.e. INFO level also logs WARN and ERROR)

- TRACE - Most detailed level of logging, generates very large log files, should only be used by support for troubleshooting.
- DEBUG - High level log logging detailed, mainly used by support for troubleshooting problems.
- INFO - Typical log level for application, contains logs for all high level operations.
- WARN - Only logs warnings that occur in application, remove all expected "info" log messages.
- ERROR - Only logs errors, typically errors require investigation and user intervention.

Display Dialog for Error level Messages

Enabling this setting allows displays a pop up message for all ERROR and SEVERE messages to ensure they are not missed since these are typically more severe errors that should not be ignored.

Message Log File

Allows users to control mechanism in which log files are stored on disk, if daily is selected a new log file is created each day. If Rolling is selected new logs will delete old log files once file size and number of files threshold has been reached.

Location

The location in which log files are stored on disk, useful when looking for files.

ISUSCom Acquisition

Starting an Acquisition

The main purpose of the ISUS is to acquire data.

- When an ISUS is powered up solely using main power it will automatically go into acquisition mode. The way in which it will acquire data (Continuous, Scheduled, ...) will depend upon how the instrument was configured.
- When an ISUS is powered up by USB (with ISUSCom running) it assumes it is being configured and will automatically be sent into Setup mode and await commands from the USB interface. From Setup mode an acquisition with real time display can be started by pressing the "Run" button. The description of this Real time display acquisition is provided below.

When both main and USB power are removed from the ISUS, it will execute a controlled shutdown. The power for this shutdown resides in electric capacitors that are charged whenever the instrument is powered up. It is advisable to let the controlled shutdown run its course and the capacitors discharge before reconnecting power. A wait time of 30 seconds is sufficient; if reconnecting too early, the instrument might be brought into an intermediate, undefined state, where it does not respond.

Starting an Acquisition in ISUSCom with Real Time Display

When starting an acquisition within ISUSCom, the Real Time Display allows monitoring of the generated data. Before deployment it is advisable to confirm that the generated data are within the expected range. This check is particularly important after an updated calibration file has been uploaded onto the ISUS. When starting an acquisition through ISUSCom, the following dialog will appear.

Start Acquisition

Steps

1. **Start Acquisition**

Start Acquisition

Acquisition Mode

Operational Mode: CONTINUOUS

Frame Transfer Mode: FULL_ASCII

Sensors

☒ Nitrate

☒ AUX1

☐ REF_AVG

☐ HUMIDITY

Status: All fields validated, Press Finish to Start Acquisition.

< Back Next > **Finish** Cancel Help

Description of fields

Operational Mode

Displays the current user-configurable operational mode of the ISUS.

Frame Transfer Mode

Three frame output formats are available in the ISUS: Concentration ASCII, Full ASCII (default) and Full BINARY. All three formats are described within the instrument XML file. Both ASCII and BINARY Full modes provide all available information to the user, at the expense of increased frame and log file size. The Concentration mode provides a greatly reduced frame, containing only a time-stamp, the nitrate concentration and auxiliary fitting results as calculated by the ISUS. The frame format for each mode is given in the table below. Please note that either frame output mode may be used regardless of the operation mode of the instrument.

In ASCII frames, data fields are comma-delimited and of variable size.

In BINARY frames, separate fields are of a fixed length, and thus do not require delimiters. The absence of delimiters and the inherent compact representation of data leads to a reduction of the frame size by a factor of nearly three.

BINARY frames have to be converted to ASCII (e.g using SatCon) data for use in most desktop applications.

Sensors

Each ISUS is pre-configured with a valid calibration file. The calibration file of the ISUS lists the chemical species that the ISUS is configured to collect. The ISUS can be configured to collect up to 4 chemical species. When starting an acquisition, ISUSCom allows you to select which of these chemical species and/or ancillary sensors you wish to view within the graph and real time data viewer.

[Acquisition Display Windows](#)
[ISUSCom Mooring tips](#)


ISUSCom Acquisition Display

Graph Windows

ISUSCom is setup to allow you to view the most commonly required graphical representation of data collected from the ISUS. The graphs can either be generated from a live acquisition or they can be recreated from a raw data file collected in the past. The two types of graphs are described below.

Time Series Graphs


The time series graphs show each (selected) chemical species and/or ancillary sensor as it changes over time. The ISUS instrument currently collects data on 2 chemical species, nitrate and bromide. The main function of ISUS is to collect Nitrate data and the time series view enables the user to track and visualize changes in nitrate concentration over time. This may be useful when checking standards or monitoring a solution in flow through mode. The time axis label shows the time zone of the time values based on the "Use UTC Time" option in the ISUSCom Preferences.

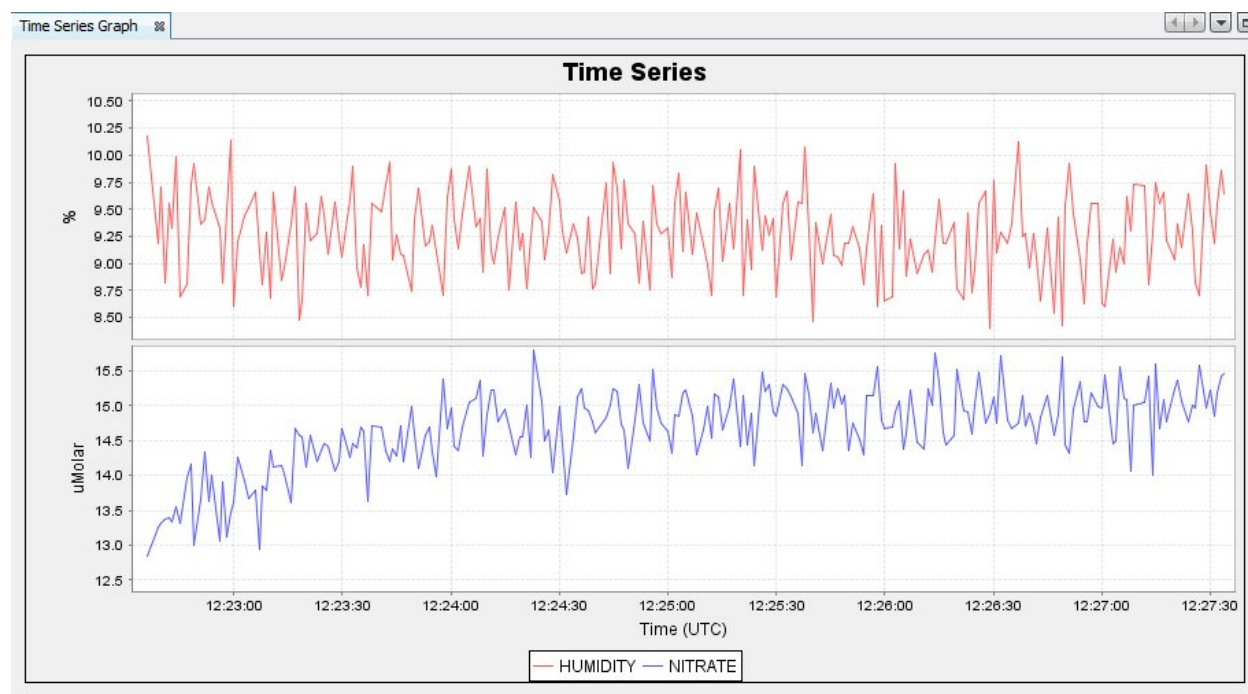

Spectra Graphs


The spectra graphs show raw counts for both the light and dark frames for each wavelength from about 190nm to 400nm. This view displays the amount of light at each wavelength reaching the spectrometer. "Counts" are a representation of the spectrometer voltage output that is directly proportional to the amount of light reaching the diodes. The three main components that make up the optical path in the ISUS are the UV lamp, the fiber optic probe (includes the sample tip) and the spectrometer. The spectra displayed in the spectral view are a combination of the spectral shape of the lamp output, the transmission characteristics of the fiber optic probe, and the relative response of the spectrometer diodes. The "in-air" spectra will always have the same characteristic shape. When a sample is added, the absorption characteristics of the dissolved chemical species such as nitrate will change the spectral

shape displayed. For example, when sampling salt water, the first few wavelengths will be absorbed completely by the bromide ion.

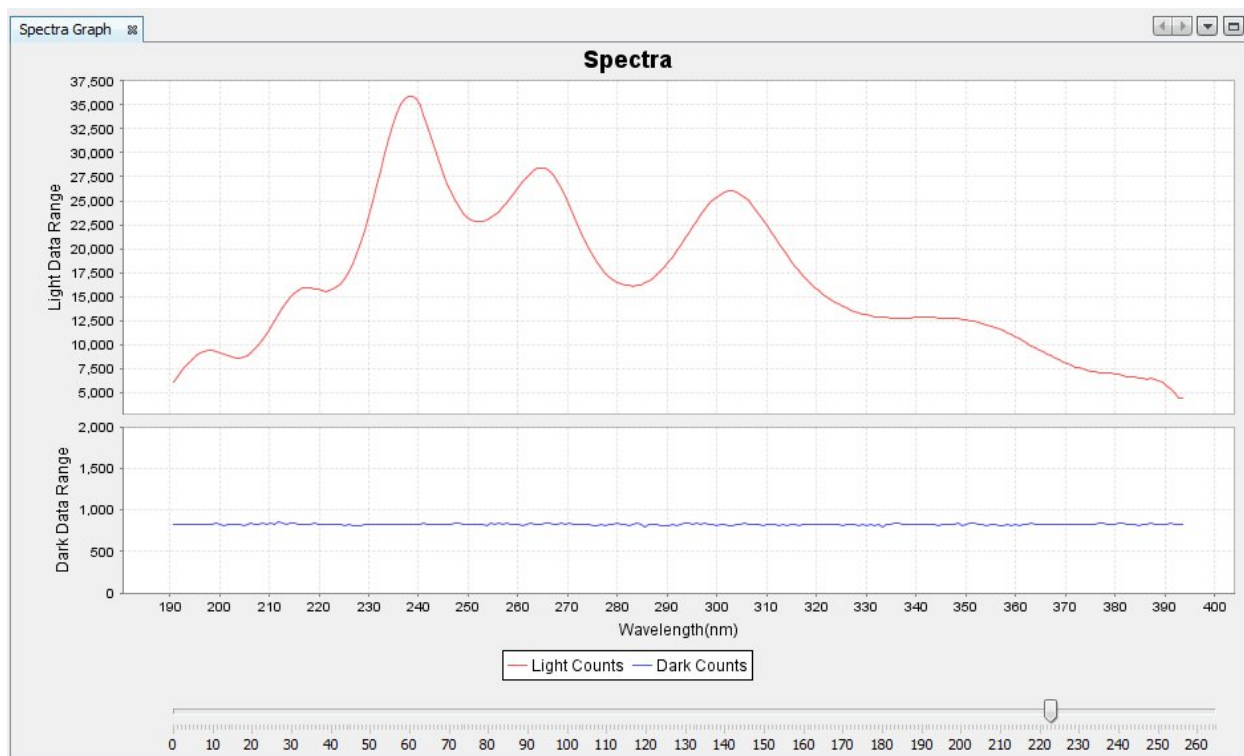

Total Absorbance Graphs

The total absorbance graph displays calculated absorbance from 210 nm to 370 nm. The total absorbance display was added to ISUSCom as an alternative to the Spectra Graph to help users interpret and understand sample spectra. Interpreting the absorbance graph requires no prior knowledge of the typical shape of the measured spectra. When measuring a pure de-ionized water sample, the absorbance graph should be flat. As absorbing species such as nitrate and bromide are added to samples, the absorbance will increase exponentially with decreasing wavelength.

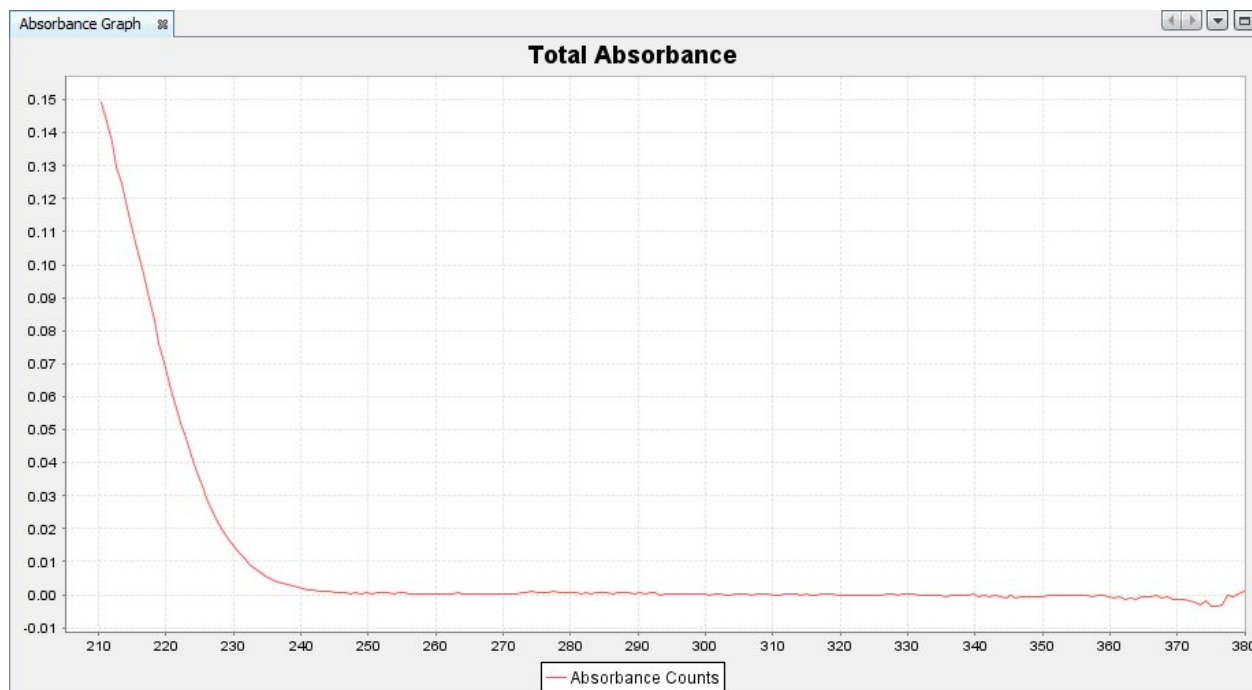

Sensor Data Viewer


When an acquisition starts the real time view will be displayed in the bottom left part of the application. This component displays the last known values reported for each chemical species and/or ancillary sensor. These values are the identical values graphed in the sensor time series graphs. The time stamp value is obtained from the date and time sensors in each data frame. The time zone used for the time stamp value is based on the "Use UTC Time" option in the ISUSCom Preferences.

The "Data Acquisition" window displays the following information:

- Sensors:**
 - NITRATE: 15.45 uMolar
 - HUMIDITY: 9.64 %
- Acquisition Statistics: ISUS0122**
 - Time Stamp: 07 Sep 2007 12:27:35 UTC
 - Frames Read: 266
 - Lost Bytes: 2432
- Acquisition Errors**
 - Frame Errors: 0
 - Details button

Log Management Window

The log management window will allow you to create a separate log that is a subset of the current acquisition. When an active acquisition is underway press the Start Log button to begin logging data to a local file. Once enough data has been logged simply press the Stop Log button to finish logging. When the Auto Log option is enabled the Log Duration and Log Interval time values (hh:mm:ss) are used to log data to multiple data files when the Start Log button is pressed.

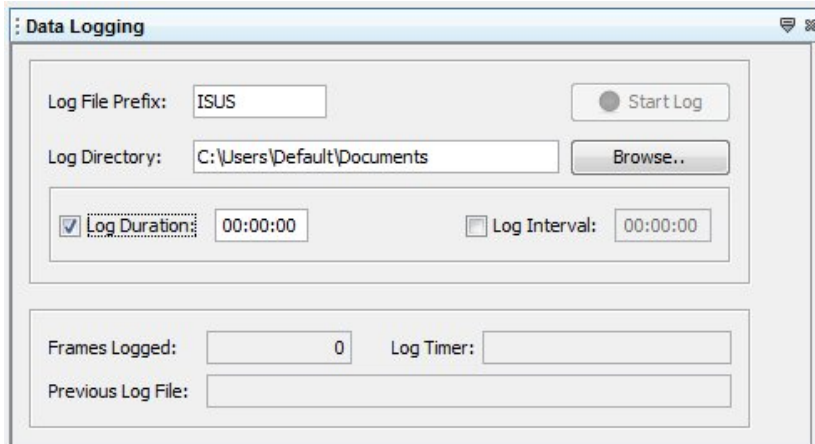

The screenshot shows the 'Data Logging' window with the following fields and controls:

- Log File Prefix:** Text box containing 'ISUS'. To its right is a **Start Log** button.
- Log Directory:** Text box containing 'C:\Users\Default\Documents'. To its right is a **Browse...** button.
- Log Duration:** A checked checkbox followed by a time box set to '00:00:00'.
- Log Interval:** An unchecked checkbox followed by a time box set to '00:00:00'.
- Frames Logged:** A text box containing the value '0'.
- Log Timer:** An empty text box.
- Previous Log File:** An empty text box.

SUNACom Acquisition Monitor

Data Acquisition Monitor

Acquisition Monitor can be found from the Window menu on the toolbar or the Nitrate viewer "Acquisition Errors" details button.

The Acquisition Monitor window allows users to see the overall results of an acquisition. It is useful in displaying problems that are occurring within the frame that the ISUS instrument is outputting.

Data Acquisition Monitor						
Frame Statistics						
Frame Id	Read	Errors	Checksum Errors	Counter Errors	Status Errors	Fitting Errors
SATNLF0122	40	0	0	0	0	0
SATNDF0122	4	0	0	0	0	0
SATNDC0122	0	0	0	0	0	0
SATNLC0122	0	0	0	0	0	0
SATNDB0122	0	0	0	0	0	0
SATNLB0122	0	0	0	0	0	0

Description of Fields:

The statistics are populated when an acquisition is active, In most cases the number of erroneous frames are minimal, or none. This panel can be useful in determining when and why errors are occurring.

Frame Statistics

- Frame Id - The unique identifier of the frame in the Satlantic instrument package definition.
- Read - The number of valid frames read during an acquisition for a particular frame.
- Errors - The number of frames read that contained errors during an acquisition for a particular frame.
- Checksum Errors - The number of frames that contained checksum errors, typically discarded.
- Counter Errors - The number of frames that contained counter errors, typically not discarded.
- Status Errors - The number of frames that contained status errors, typically discarded.
- Fitting Errors - The number of frames that contained fitting errors, typically discarded.

Tips for Mooring ISUS

To prepare the ISUS for mooring deployment:

- Check the Available Disk Space on the ISUS. If there is not enough for the deployment then use the ISUSCom File Manager to download and/or delete all data files from the ISUS.
- Create and Upload the desired Schedule.txt file using ISUSCom
- Set the ISUS operating mode to SCHEDULED
- For long term deployments where more than 100MB of data will be logged, set the file logging option to “DAILY” rather than the default “SINGLE”. We have noticed that if the SPECTRA.DAT file gets to be very big, the frame rate slows down slightly as the firmware takes longer to append to the larger file (this applies only to firmware versions before 2.8)
- Reboot ISUS and ensure that schedule is valid and working
- Clean the probe tip with isopropanol and Q-tips
- Mount ISUS on mooring in horizontal position with gap in probe tip open vertically (see below)
- Install bio-fouling guard with the guard and probe tip both flooded if possible (this reduces the possibility of trapping air in the probe tip)

Mooring Data

The main issues effecting mooring data quality are bio-fouling and sediment buildup. To mitigate the effects of these two factors, we recommend users install the anti bio-fouling guard and:

- Mount the ISUS in the horizontal position with the gap in the probe tip open vertically (i.e. opening up for air to escape and opening down for sediment to sink) to reduce the possibility of sediment collection on the probe mirror. Anything that interferes with the light path may adversely affect the data.
- Experiment with different mesh sizes in the anti bio-fouling guard. The standard mesh size is 100µm, but 50µm and other sizes are also available. Depending on the type of environment, users have to balance the trade offs between keeping bugs and debris out and clogging the filter and reducing water flow. In high sediment areas, some users have found using no mesh works better, since the smallest particles pass through the mesh and accumulate inside. In this case the mesh can act like a trap and keep sediment in.
- In areas with robust biological activity, fouling may occur in spite of the copper ions released by the guard. In this case, we recommend a more intense sampling schedule to increase the UV radiation passing through the probe tip. Because the ISUS outputs short wavelength UV, the more you sample, the cleaner the tip will stay. The tradeoff here is that power is always an issue and the sampling schedule is always constrained by power. Keeping this in mind, users should opt for the most aggressive sampling schedule that the power budget and memory will allow.
- In static areas with low water flow, various low power pumps can be used to flush the probe tip area with sample water prior to obtaining data. Flushing the probe helps reduce bio-fouling and extend the length of useful deployments. In-line filters may also be used in conjunction with pumps, but clogging can become an issue in highly turbid waters. Users must weigh the benefits of filtering vs. the consequences of clogging.

Tips for Profiling with ISUS

- Set the ISUS operating mode to CONTINUOUS
- Clean the probe tip with alcohol and Q-tips prior to each deployment
- Let the ISUS warm up for 8-10 minutes prior to each cast. Normal operation of a CTD profile usually calls for surface soak of a couple of minutes to let the pumps start up and instruments equilibrate. We find we get the best results when we apply power to the ISUS 8-10 minutes prior to putting the package in the water. This provides enough time to let the lamp output stabilize.
- Once a day check instrument stability by measuring nitrate in a pure water sample (e.g. Millipore DIW) as described in the “Long-Term Drift” section below.

Compensating for Instrument Offset

Two types of instrument offsets are possible with ISUS nitrate sensors. One is associated with a long-term drift in the instrument response caused by changes in the transmission properties in the internal optical components and the other is associated with interfering species present in the water.

Long-Term Drift

To check your instrument for long-term drift, turn on the ISUS, let it warm up for 8-10 minutes and measure a sample of ultra-clean de-ionized water (DIW). If the nitrate reading is >-2 or $<+2$, the instrument response has not drifted. If it has drifted, you can remove the drift by updating the reference spectrum in the cal file. This is done using the program ISUSCom.

Interfering Species

Various dissolved and particulate substances in the water can interfere with the UV spectra sampled for nitrate analysis. Particulate matter, if suspended in the water column (i.e. not settled on the probe tip), generally has the effect of increasing noise slightly with little reduction in accuracy. Because the spectral signature of many particulate sediments between 200 and 240nm is relatively flat, as long as a significant signal is still reaching the spectrometer, the results are generally good.

CDOM on the other hand does have a spectral component to its absorption curve and thus may have a greater effect on the end calculation of nitrate concentration. We are currently investigating methods of incorporating a third extinction coefficient to compensate for CDOM absorption, but have not yet obtained significant improvements. CDOM absorption is rarely an issue in the ocean, but can have an effect in fresh water systems.

ISUS File Processing

Processing functions bundled with ISUSCom.

[Nitrate Reprocessing](#)

[ISUS-X Depth Processing](#)

Reprocess Nitrate Data

Note: Reprocessing Nitrate Windows are **ONLY** enabled when the instrument is **Disconnected**, to reprocess data first disconnect ISUSCom. Ensure both "Connection Mode" and "Serial Status" show **Disconnected**.

Nitrate Reprocessing Dashboard view

This dashboard view panel contains information fields required to reproduce a nitrate value from raw data that contains spectrum values. The current nitrate number produced with the ISUS and SUNA instruments use the same basic algorithm with many of the inputs fixed. This function allowed users to reproduce this number with different inputs to possibly obtain more accurate results.

Nitrate Processing Dashboard SUNACom Dashboard Window

Nitrate Processing Settings

Calibration File:

Instrument Package:

Include Range: -> nm

Min data L-D threshold: counts

Baseline Order:

☒ Salt Water Processing

Nitrate Data Files

Output Data Files

Output Directory:

☒ Single Output File ☐ Graph Results

Process Selected File(s)

Description of Fields:

The first three fields allow users to specify input files and directories needed for this processing

- Calibration File - The calibration file to use when reprocessing data. Each calibration makes a new copy of this file. Each file contains properties of the instrument which change over time. When reprocessing a data file it is important to use the calibration file that was valid for the time when the data was collected. Using the wrong file may produce an invalid nitrate number.

An ISUS instrument's calibration file can either be located in the local directory where a copy was saved when the instrument's calibration was updated or by using the ISUSCom File Manager to download a calibration file from an ISUS to a local directory.

- Instrument Package - The Satlantic instrument package file defines the nitrate frames within the data files.

An ISUS instrument's Satlantic instrument package file can be located in the "Satlantic\ISUS" folder located in the user's "My Documents" folder. The Satlantic instrument package file is downloaded to this folder when ISUSCom establishes a connection to an ISUS.

- Output Directory - The directory where result files will reside after processing.

Processing Options


- Include Range - The specific wavelength range used to calculate nitrate. Algorithm ignores wavelengths outside this range.
- Min data L-D threshold - If the light counts(L) minus the dark counts(D) for a particular wavelength is too low it will produce an invalid nitrate value. This settings allows users to set this threshold.
- Baseline Order - The Baseline order to use in the calculation, typically Linear.
- Salt Water - Selected for data collected in salt water. When selected the algorithm fits for bromide absorption which is present in salt water. De-select for data collected in fresh water.
- Single output file - Setting to append all results to one output file when processing multiple raw data files.
- Graph Results - Specifies to graph results as processed or run in non-interactive mode.

Selecting Nitrate Data files

Processing will execute against all files that are selected. Selecting files for processing is a two step process. First files must be added to the file list using the "Select" button. Once added files must be selected, multiple files can be selected by using the Ctrl and Shift keys.

Displaying Processing Results

Results from nitrate re-processing are displayed within a custom component that displays absorbance component for each chemical species that exists within the data files based on the calibration information.

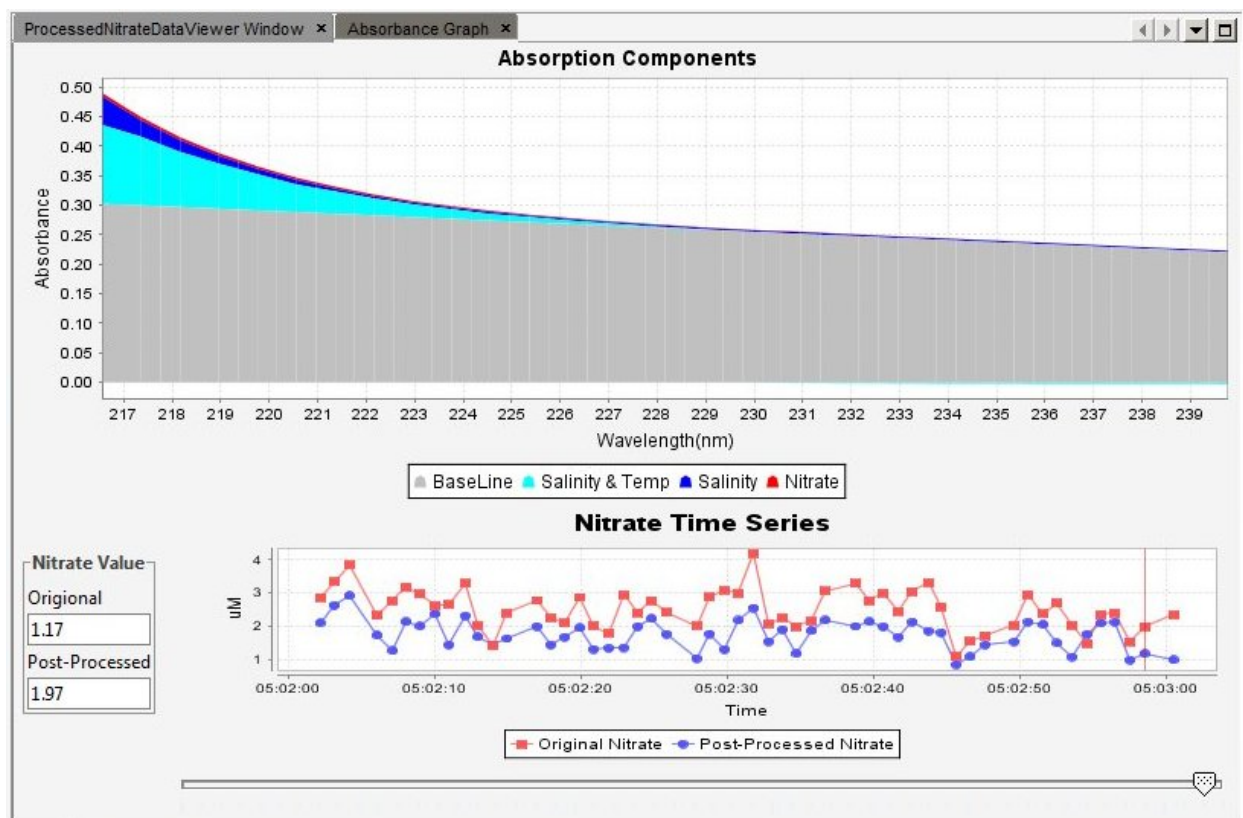

Results are saved in the output location within time stamped file(s) containing headers with processing parameters.

Table 1: Processed ASCII Data Frame Format

Field Name	Format	Description
INSTRUMENT	AS 11	The frame header or synchronization string starts with "SAT" for a Satlantic instrument, followed by four characters identifying the frame as Nitrate Processed "NPRO". The last four characters are the instrument serial number. Example for sn 0001: SATNPRO0001 processed frame
DATE	AS 8...10	The date from the raw data file(if possible), otherwise processing date(i.e. 11/06/2009)

TIME	AS 11...12	The time from the raw data file(if possible), otherwise processing date(i.e. 16:55:24.000)
NITRATE	AF 4..5	The Original Nitrate concentration as calculated by the Instrument
Recalculated NITRATE	AF 4..5	The New Recalculated Nitrate concentration
ASW	AF 9..12	The absorbance concentration of seawater, temperature(with seawater) and baseline components.(i.e. -5.41808E-3)
T* ASW	AF 9..12	The absorbance concentration of temperature(with seawater) and baseline components.
Baseline Components	for each baseline AF 9..12	The absorbance concentration of baseline components.

ISUS-X Depth Processing

Feature Availability

The ISUS-X Pro Depth processing functions cannot be used with a standard ISUS Instrument. The ISUS-X version of the ISUS instrument enables guest instrumentation to be attached to an ISUS. When one of these guest instruments is a Depth sensor this function be be used to calculate Depth Interpolation and UV absorbance.


Overview

The ISUS-X Depth Processing function processes raw ISUS-X sensor data such that all sensor values are interpolated onto a common set of depth coordinates. Before doing so, the raw sensor values are calibrated and the UV sensor data is dark corrected. In addition, ISUS-XPro calculates the UV absorbance values.

Processing ISUS-X data requires several different files listed below:

1. **Isus Calibration File:** A file containing reference spectral values used during the absorbance calculations.
2. **Instrument Configuration File:** An XML file containing a detailed description of all the instruments and associated sensors that make up the ISUS-X.
3. **Raw Data Files:** Files containing data collected from an ISUS-X instrument.

Using the GUI

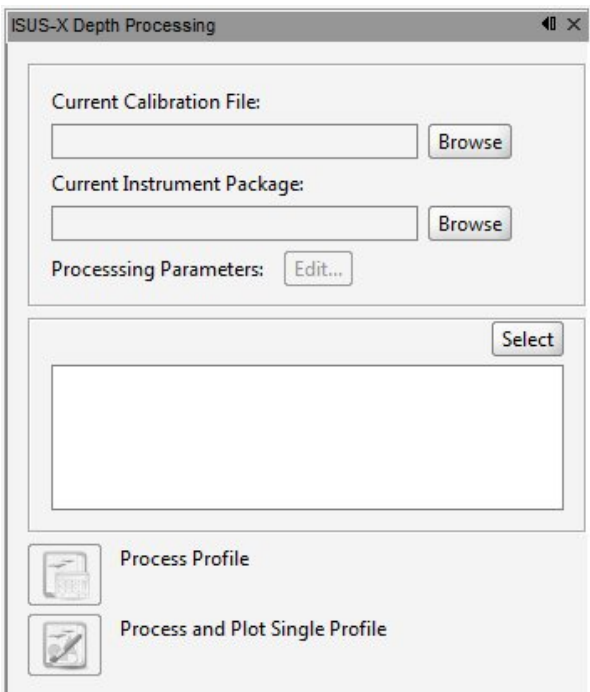

ISUS Calibration File Selection

The ISUS Calibration file that is selected will be displayed in the *Current Calibration* text box and will be used for data processing. Note that the ISUS Calibration file is supplied by Satlantic and can be found on the instrument CD. The Calibration file can also be downloaded via ISUSCom.

Instrument Configuration File Selection

The instrument package XML file which contains a detailed description of all the instruments and associated sensors. The instrument package that is selected will be displayed in the *Current Instrument Package* text box and will be used for data processing. Note that the instrument package XML configuration file is supplied by Satlantic and can be found on the instrument CD.

Selecting Raw Data Files

Selecting Select button allows the user to choose one or more *.raw or *.dat logged data files. The data files that are selected are displayed in the Data Files text box and will be used for data processing. Please note that only data files with changing pressure values (i.e. profiles) will be processed. If other data files are included in the list, processing will stop upon encountering the first one.


Process Profile Button

Selecting Process Profile button starts the data processing sequence on the selected data files. Processing is disabled until the Instrument Package file, the Calibration File, and the Data files have all been selected.

Process and Graph Button

This function preforms the exact same processing as the above then presents data in a graph, This function only works on one data file at a time.

Parameters Selection

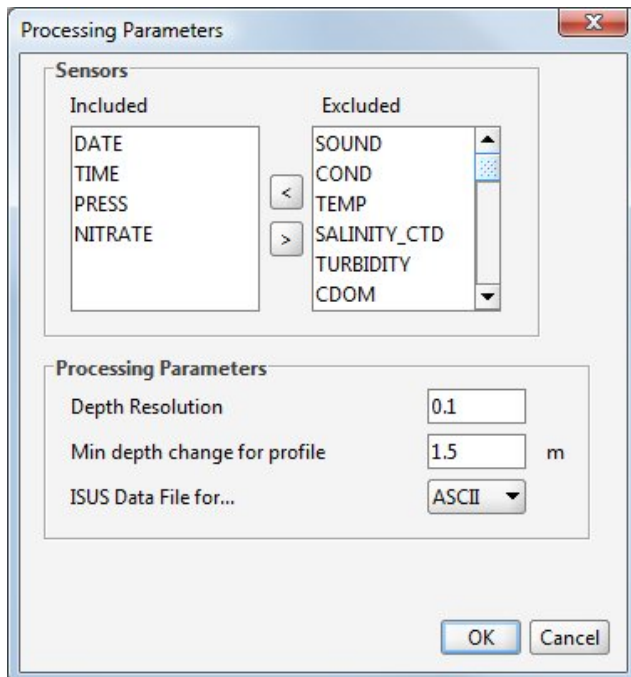

Sensor Include/Exclude List

The sensor include list adds sensors which are to be included in the data output file after processing. This is useful for adding ancillary sensor values that are of needed by the user.

Depth Resolution

This value sets the vertical depth dimension (in meters) to use as an interval between each data frame when interpolating sensor values with respect to depth coordinates.

Min depth change for profile

This value sets the minimum vertical depth required for a depth profile to be processed.

ISUS Data File Format

This feature can be used to process ASCII or Binary raw data. This setting must be set to the properly in order for processing to be done.

Data Calculations

Depth Interpolation

The function does a depth based interpolation on the raw sensor data and then calculates absorbance values for the interpolated UV sensor values. In practice, the depth sensor times are interpolated against a set of regularly spaced depth values, whose span matches that of the original depth values. The raw data from the sensors of interest are then interpolated against the depth's interpolated times.

The function processes upcasts and downcasts separately. The data is divided into downcast and upcast under the following assumptions:

- The downcast depths precede the upcast depths.
- There is at most one set of downcast depths and at most one set of upcast depths.

UV absorbance

The absorbance calculation is taken from "Mobley, Curtis D. Light and Water. San Diego: Academic Press, 1994" pp 61-63.

ISUS Operation modes

Continuous

In continuous or “profiling” mode the instrument begins acquiring data after a configurable number of seconds (initially 15) and stops when power is removed. Each acquisition cycle starts a new log file on the ISUS internal flash-disk with the name DIVE`nnn`.DAT, where ‘`nnn`’ is incremented with each cycle; ‘`nnn`’ is referred to as the deployment counter and is saved in non-volatile memory. Thus, each profile is logged to a separate file. When connected via a terminal emulator, the user will see a per-second counter before the start of the acquisition. The ‘G’ (go) command bypasses the start-up delay, the ‘M’ command provides access to menus for configuration, setup and data download. After exiting the menu the instrument will return to the start-up counter. After the instrument has started acquiring data, the ‘S’ (stop) command (multiple key presses may be necessary) will return the instrument into the start-up loop.

Fixed Time

Fixed time mode is almost identical to continuous mode. The only exception is that the instrument stops acquiring data after a user configurable period and enters low power mode. The user can then choose to enter the menu.

Scheduled

Scheduled mode is typically used in moored applications. The ISUS can be scheduled to periodically wake up, measure, and record data. Between events, the instrument enters a very low-power sleep state to conserve power.

The schedule is defined in the SCHEDULE.TXT file, which has to be uploaded onto the instrument prior to deployment. Initially, the instrument is scheduled to power the instrument once every 60 minutes, and acquires 20 seconds worth of data every time. The ISUSSchedule program is used to create a custom SCHEDULE.TXT file.

The scheduling file contains three types of command lines, for example:

16:30:00 Power +ISUS

16:30:45 Acquire 30 ISUS

16:31:20 Power -ISUS

The file follows Satlantic's schedule file format, which can be used to schedule multiple instruments. Here, only one instrument (ISUS) is scheduled. Each acquisition event must contain the three above commands, i. e. powering up the ISUS (indicated by the '+' in the first command), acquiring data over a period of time (here 30 seconds), and finally powering off the instrument (indicated by the '-' in the last command). A detailed description of the schedule file is provided in the appendix in section I.

More generally, the scheduling event follows a simple three-state model: the instrument is either OFF, ON, or ACQUIRING. Initially, the instrument is in the OFF state. The instrument transitions from one state into another state are triggered by the above commands.

	OFF	ON	ACQUIRING
Power +	Switch to ON	Ignore	Ignore
Power –	Ignore	Switch to OFF	Switch to OFF
Acquire	Ignore	Switch to Acquiring	Increment acquisition period
After #Sec	Ignore	Ignore	Switch to ON

When operating the instrument, some additional considerations apply. First of all, there is a slightly variable time lag between the 'Power-On' command, and the readiness of the instrument. Thus, sufficient time should be given, normally 25 seconds are enough. Secondly, the instrument lamp needs some time to stabilize. To ensure data is acquired with the same lamp stability status, all acquisitions should begin at the same time relative to the 'Power-On' time of the instrument. Also, during warm-up the lamp changes its spectral characteristics; therefore the acquisition duration should also be kept fixed to maintain identical operating conditions.

Should there be an overlap of the 'Power-On' sequence into the acquisition period, the acquisition will simply begin later and terminate when the scheduled start time plus duration is reached. In case the acquisition period extends beyond the 'Power-Off' point, the later event will overwrite the acquisition

request, terminate the acquisition and power off the instrument. Powering off the instrument overwrites all other actions, mainly to ensure the instrument will not remain powered over arbitrary periods of time.

Data acquired during each scheduling event are logged depending on user specification either to a daily file SCHyyddd.DAT (yy and ddd indicating year and day of the acquisition) or to one file per event DIVEnnn.DAT (to a maximum of 999 files)

While in low-power sleep and when connected to a terminal emulator, the instrument will wake up upon any key press. There will be a 15 second window during which it is possible to enter the menu with the 'M' command, otherwise the instrument will go back to sleep to wait for the next scheduled event. After a scheduling deployment, the message and error log files should be consulted. Problems occurring during operation are recorded in these files. (Refer to the Fitting Setup Menu Section for details.)

Benchtop

Benchtop mode is basically identical to scheduled mode. The only difference is that the instrument assumes that the power supply will be steady, and thus waive some precautionary measures. When operating in Benchtop mode, the instrument acquisition must be interrupted and the instrument must be in the user interface menu before power can be disconnected.

Triggered

Triggered mode brings the instrument after initialization into a low power sleep mode. An external controller can trigger an acquisition by first sending an arbitrary character and then the character 'g' (for go) over the serial RS-232 line. There must be a time delay between the first and second character of between 1 and 4 seconds. The ISUS instrument will wake up, and acquire data. The acquisition can be terminated by either sending a termination key (character 's' for stop) or by choosing a fixed time for each acquisition. Triggered mode is similar to scheduled mode in that the instrument will acquire data intermittently.

Deployment Checklist

The Deployment Checklist is intended to help your deployment go as smoothly as possible. Ensuring these few things are setup properly will reduce most of the common problems that could cause a deployment to fail.

- Check lamp life

The ISUS lamps are rated for 1000 hours. Ensure that the remaining lamp time covers the expected deployment duration.

- Check Available Disk Space

The ISUS standard disk size is 256 MB. Ensure that there is enough space on the flash drive to hold all the data you plan to collect. Please see section D of the MBARI-ISUS Operation Manual for the size of the various frame types. The default ASCII Full Frame is 1675 bytes per frame. The ISUSCom File Manager should be used to download and/or delete data files from the ISUS to increase the available disk space.

- Check Operational Mode

Open the settings dialog to ensure that the operational mode matches what you expect it to be.

- Check Deployment Counter

For convenience, it is sometimes easier to reset the deployment counter back to its default value of 1 for each deployment. Be advised that if data files with the 001, 002, 003, ... etc extension exist on the instrument disk, the new data will be appended to these files. Before resetting the deployment counter to 1, remove all old files from the instrument disk using the File Manager function.

- Check Frame Logging Mode

Open the settings dialog to ensure that the ISUS is set up to log data as you expect.

- Generate Summary Report

Create a summary report of all the settings on the ISUS, inspect it and save it to disk. This report serves as a snapshot of your configuration for the instrument that can serve as a restore point. If a support issue arises during deployment, this file will be critical in trying to diagnose the problem.

- Shutdown ISUSCom

Put the ISUS in the mode you wish it to restart in and shut down the ISUSCom application. Then disconnect ISUS main power.

Troubleshooting

Before trying to diagnose an issue take a look at our [Common Problems](#) section.

ISUS Event Logs

All activity that occurs with the ISUSCom application is logged to disk in an event log file. The event log is rotated daily, the current log can be found in:

```
<INSTALL_DIR>\eventlogs\ISUSCom.log
```

Although the contents of the log are somewhat cryptic and mainly for use are of Satlantic personnel to diagnose problems within the application it will often provide clues to errors that exist within the application. Each line in the log represents an event that occurs within the application. Below is a short explanation of the format of the log file event to assist the user in trying to self diagnose problems that may occur.

Event Logs are have the following format:

```
<Date/Time>, <Module>:<Event Code> ~ <Message>,<optional stack trace>
```

Date/Time- displays the date and time when the message was logged.

Module- Displays the Module responsible for the log(either Internal,Core or GUI)

Event Code - internal code (i.e. ISC-1100-ERR) describing the module, internal error number and event severity. Severity is either INF(info), WRN(warning) or ERR(error).

Message- A text based representation of the event

Stack Trace- Optionally occurs when unexpected errors happen to show the state of the application when the error occurred.

Here is an example that shows an error that occurred when trying to delete a log file on the ISUS:

```
2007-02-28 10:39:42 UTC, GUI: GUI Internal ISC-6604-ERR ~ ConnectedMode, Action Failed= ShowDashboard.  
com.satlantic.isus.isuscom.util.ISUSComException: Response error. Error code: Unknown  
    at com.satlantic.isus.isuscom.FileManager.deleteLogFile(FileManager.java:554)  
    at com.satlantic.isuscom.ui.actions.DeleteFilesAction$1.run(DeleteFilesAction.java:128)  
    at java.lang.Thread.run(Thread.java:595)
```

Obviously these error messages are intended for Satlantic engineers and will often mean nothing to a casual user of ISUSCom. When a problem the occurs that cannot be easily explained it may be necessary to send files to Satlantic to determine the nature of the problem. When submitting an issue please have the following information on hand.

- The version of the firmware and the serial number of the ISUS you are using(see ISUSCom Dashboard)
- The version of the ISUSCom you are using(see ISUSCom About screen)

- The following files
 - o Calibration file
 - o Instrument Package file
 - o Raw Data file(s)
 - o Messages.log file from ISUS
 - o ISUSCom log files


Known Issues and Common problems

Unresponsive ISUS instrument

Although rare, under certain conditions the ISUS USB interface can become unresponsive to the command to enter Setup mode. To verify this is occurring go to the “ISUS Setup” tab in the output window and see if the window is constantly showing the \$ character with no response from the ISUS. If this situation occurs the ISUS will have to be completely powered down but removing both the USB and external power for at least a minute. Once reconnected and re-powered again the ISUS should correctly establish its connection to the USB port and ISUSCom.

Unsatisfied Link Error

When starting ISUSCom the following dialog appears, this typically means that the DLL that handles the USB connection is not in the system path.

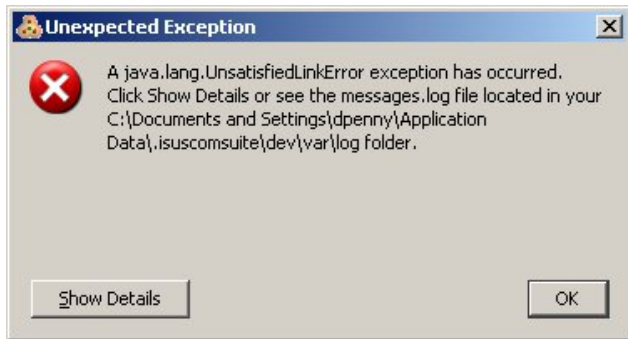

To solve this error add <INSTALL_DIR>\lib\ftd2xxj.dll to your system path.

Invalid Instrument Package file

The frame format the ISUS uses to collect data is defined by the ISUS settings, the Calibration file, and embedded within the firmware. In order for ISUSCom to process this raw data file it uses an XML(<http://en.wikipedia.org/wiki/XML>) file which defines what sensors it expects to see and in what order it expect them. Within ISUSCom this XML file is called an "Instrument Package File". It is extremely rare for users to have to edit this file because most data frame altering functions are not exposed and require manual intervention from Satlantic. In those occasions when the "Instrument Package File" is out of sync with the frames that the ISUS is producing an error will occur in the "Application" tab of the output panel displaying a "Lost Bytes" message when each data frame is read. In addition to this the ISUSCom Error Event panel should be displayed in the ISUSCom GUI.

If this occurs and you can edit your Instrument Package file using an XML editor and the XSD(the schema definition for the XML) to correct the problem. The XSD along with a word document describing the Instrument Package File format is installed with the application in the <INSTALL_DIR>\docs directory. If you still require assistance please contact Satlantic for support.

Invalid Data in Frames

Within any data logging application there is a possibility that corrupt data values can get into a data frame. For each corrupt frame the user should see a message like “Lost Bytes” in the “Application” tab of the output panel. In addition to this the ISUSCom Error Event panel should be displayed in the ISUSCom GUI. If this error is being displayed with every line it is very likely that the root cause is a “Invalid Instrument Package file” (see above section). Otherwise ISUSCom is built in a way that will display these frame corruptions to the user then ignore these corrupt data points and continue.

ISUSCom Instrument Package File

Instrument Package File

Each ISUS that is shipped provides an XML file that contains the frame format for the ISUS. As with all new Satlantic instrumentation this file follows the Satlantic XML Instrument File Format. This standard defines how Satlantic frames are composed and interpreted. A full explanation of this standard is beyond the scope of this document but is full explained with the SAT-DN-00157_Instrument_File_Format document.

The elements of this XML file are based upon the particular frames contents of the ISUS. These contents are fully described within the "Operation Manual for the ISUS Instrument. Most users will probably never have to edit this XML instrument file. In cases where it is necessary we ask that this should be done in conjunction with a Satlantic representative.

Index

A

- Aquisition (78)
 - Acquisition Views (86)
 - Mooring Tips (94)

C

- Common Problems (123)

D

- Dashboard (22)
- Deployment Checklist (115)

I

- Installing (16)
- ISUSCom Instrument Package File (125)
- ISUS USB Connection (17)

O

- Operation Modes (107)
- Overview (9)

P

- Processing (95)
 - ISUS Nitrate Reprocessing (99)
 - ISUS-X Depth Processing (106)

Q

- QuickStart (12)

S

- Setup Actions (29)
 - Update Settings (30)
 - General Settings (34)
 - Advanced Settings (38)
 - Operational Modes (28)
 - Update Schedule (41)
 - Calibration Update (44)
 - Create calibration file (50)
 - Verify calibration (53)
 - File Manager (55)
 - Application Log (72)
 - ISUSCom_Compare_Calibration (66)
 - ISUSCom_Replay_Data (68)
 - ISUSCom_Binary_Convert (67)

T

- Troubleshooting (118)